





HS01 FRAMELESS DUAL SLIDING SHOWER DOOR

INSTALLATION INSTRUCTIONS

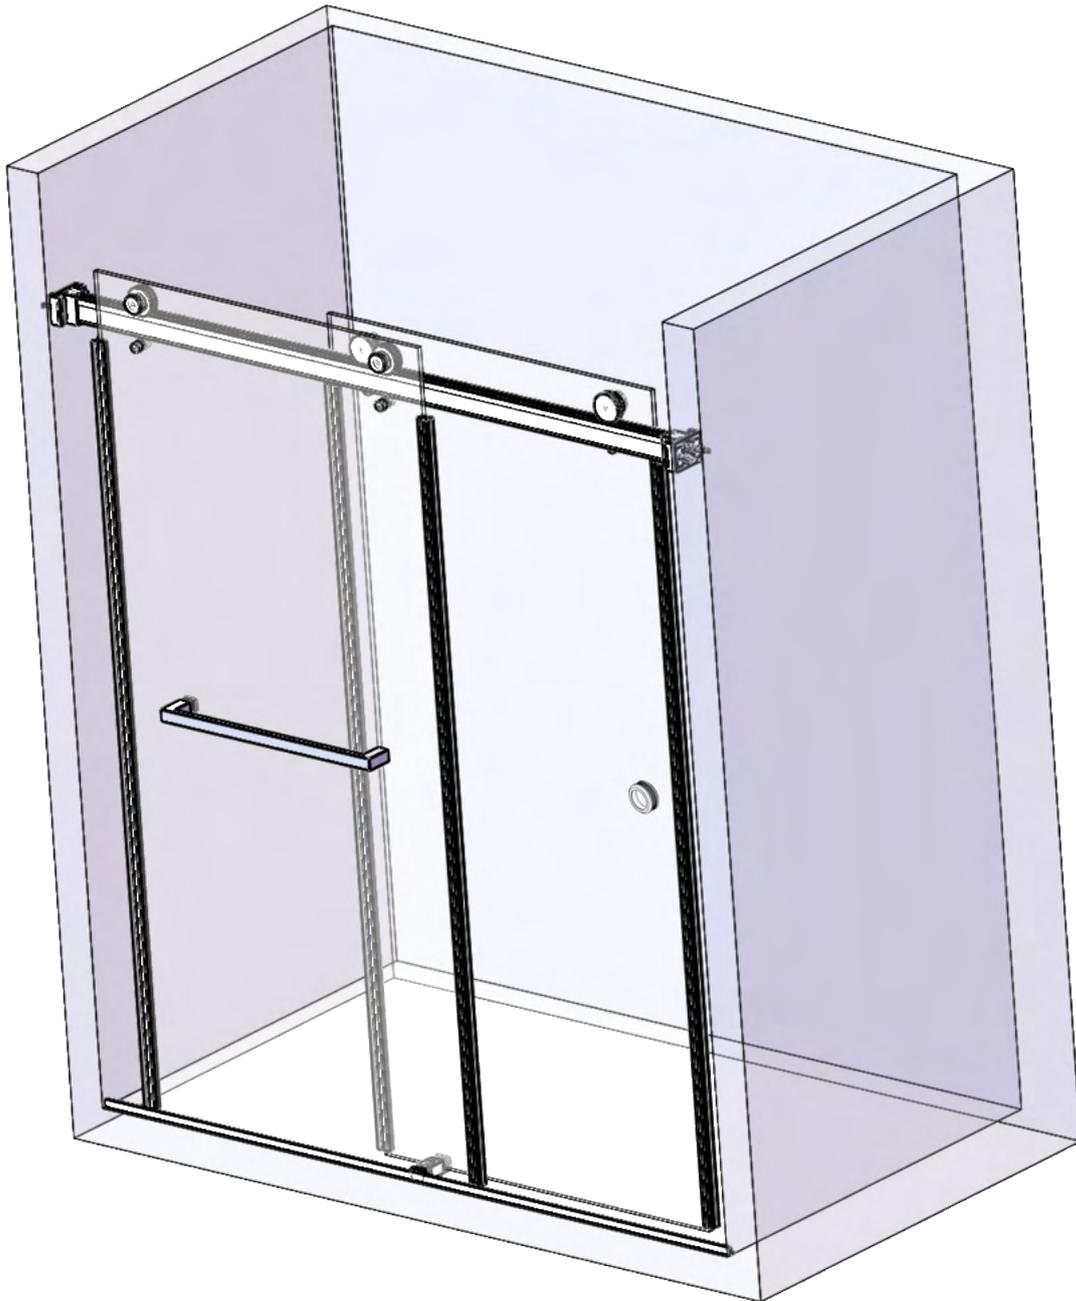


NUMBER OF PARTS


Part	Description	Quantity	Part	Description	Quantity
1a	Fixed to The Wall With Guide Rails	2	7	Glass 12	1
1b	Guide Rail Connection and Fixation	3	8	Knob	1
1c	Anti-Collision Rubber	4	9	Towel Bar	1
2	Fixed Screw	4	10	Bulb / V Seal	4
3	Guide Rail	1	11	Glass Guide	1
4	Roller	4	12	Aluminum Water Guard	1
5	Anti-Lift Pins	4	13	Fixed Screw	1
6	Glass 1	1	14		

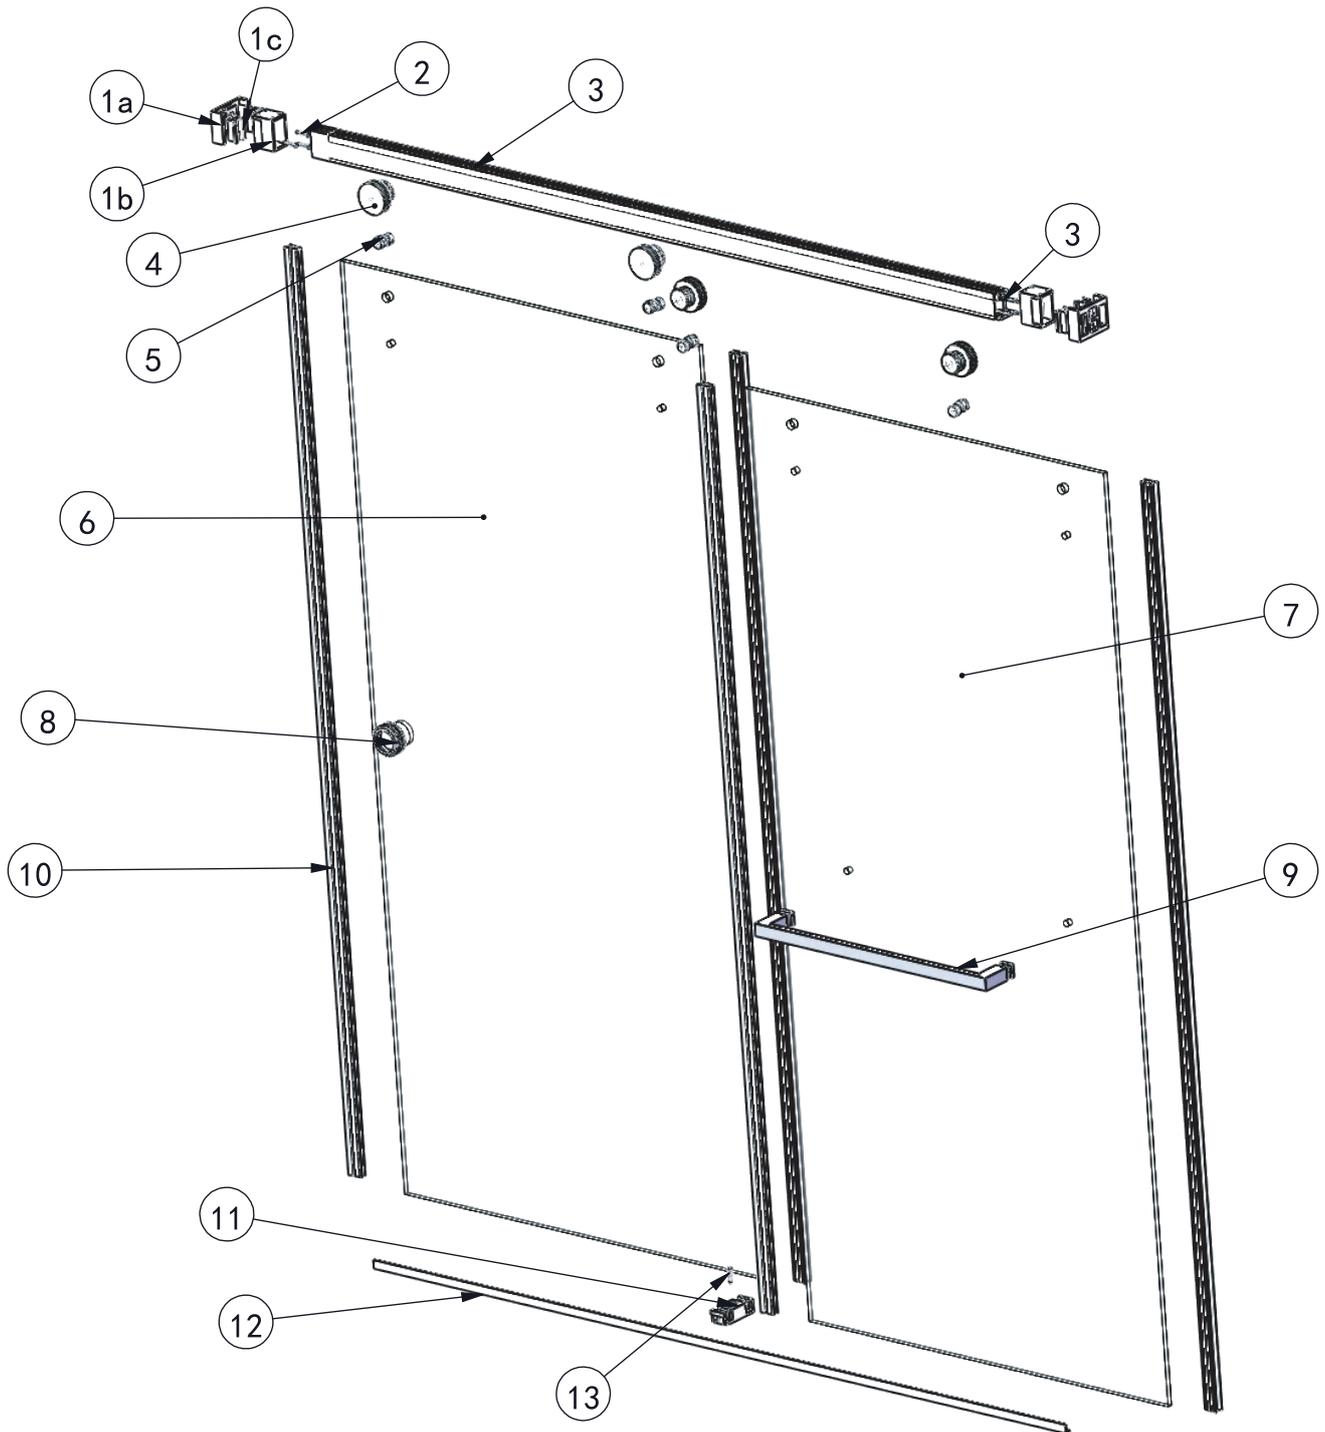


PARTS LIST

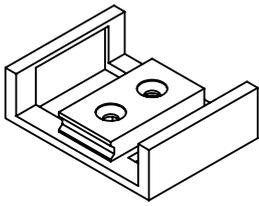

1a

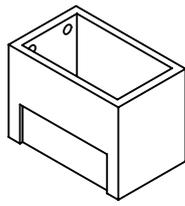


1b




1c



2

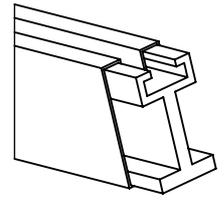


3

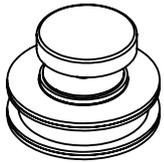


4



5

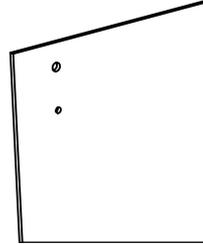


6

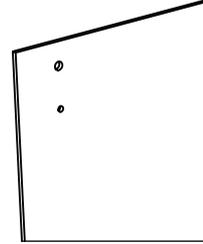

7




8

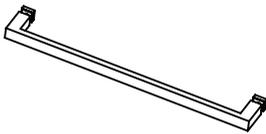

9



10

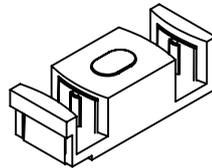

11




12




13


TOOLS REQUIRED

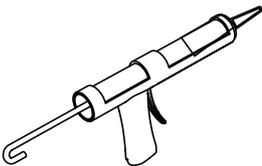



Silicone

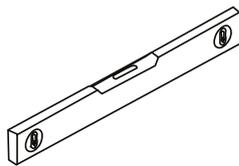


Level

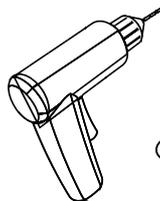

Drill

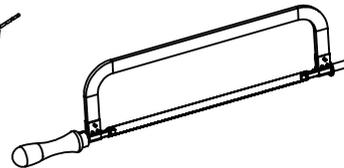


Screwdriver
(Phillips)

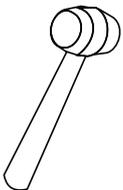


Mallet



Pencil

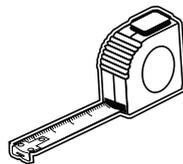

Tape Measurer




Painters
Tape



Allen Wrenches
(included)




Wrenches
(included)

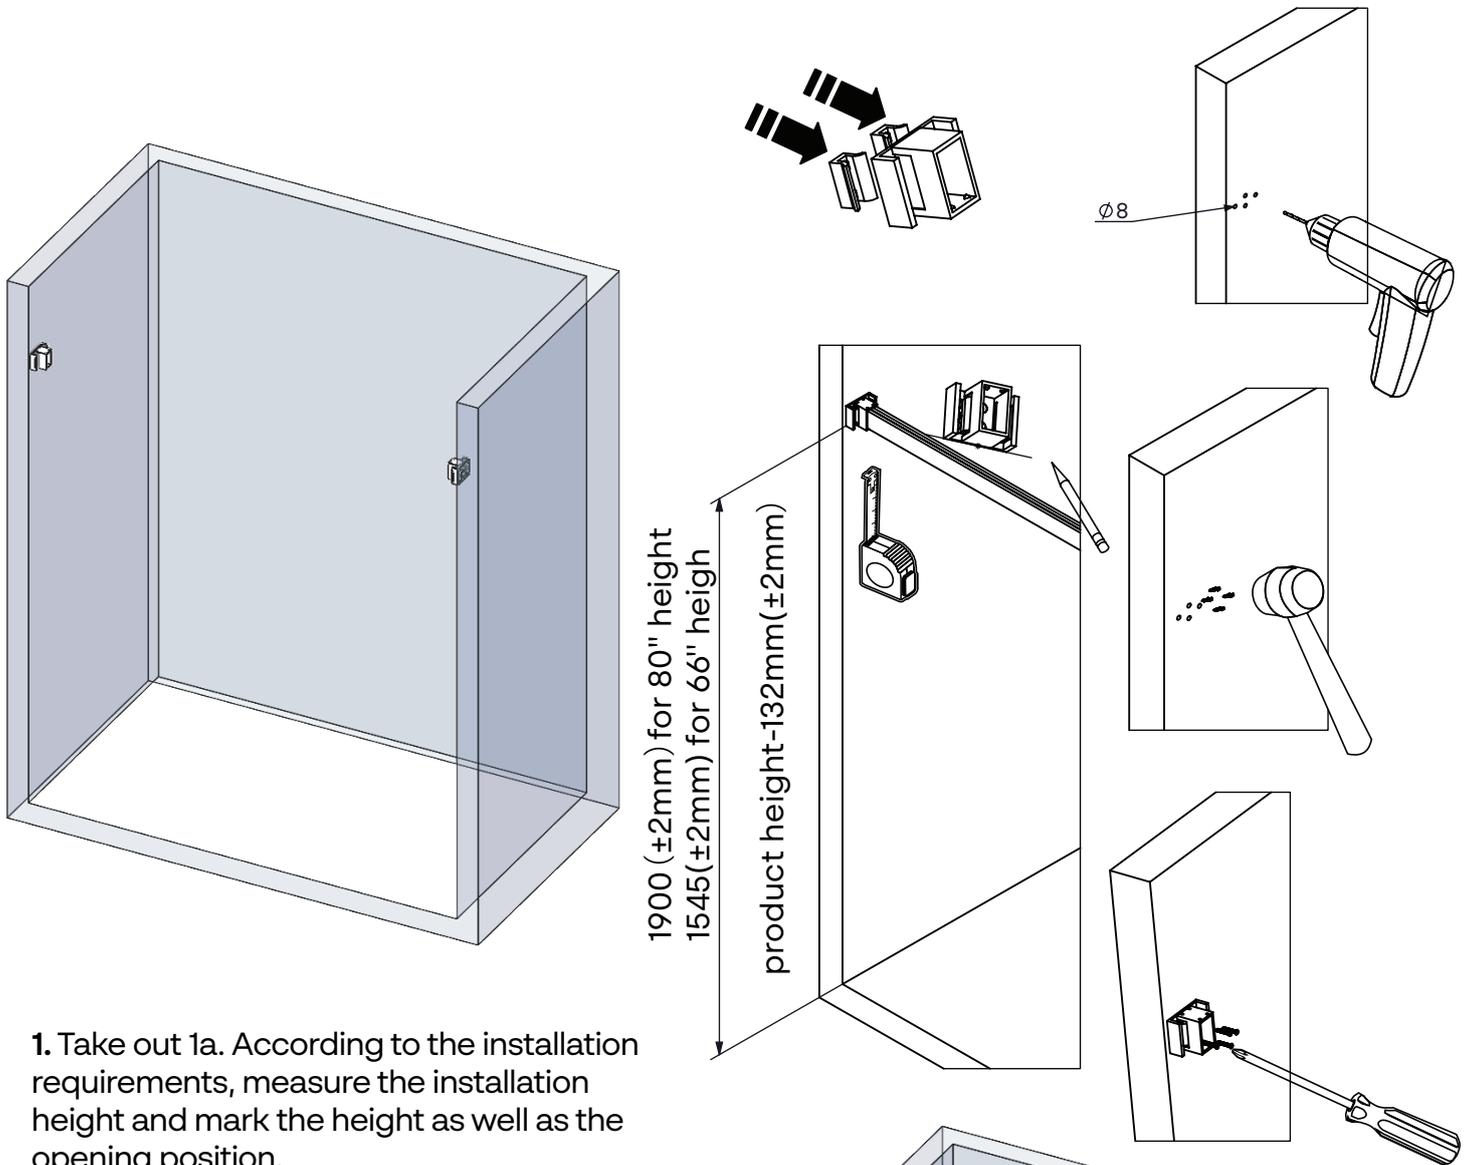


1900 (±2mm) for 80" height
 1545 (±2mm) for 66" height
 product height-132mm (±2mm)




1. Take out 1a. According to the installation requirements, measure the installation height and mark the height as well as the opening position.
2. Use an 8mm drill bit to make a hole in the wall, with the hole depth being 50MM.
3. Use a hammer to drive the expansion glue screw into the hole, and then inject waterproof glue.
4. Install 1a + 1c and tighten the screws.
5. According to the width of the door frame, cut the guide rail, install 1b on the guide rail, and then assemble it with 1a + 1c.

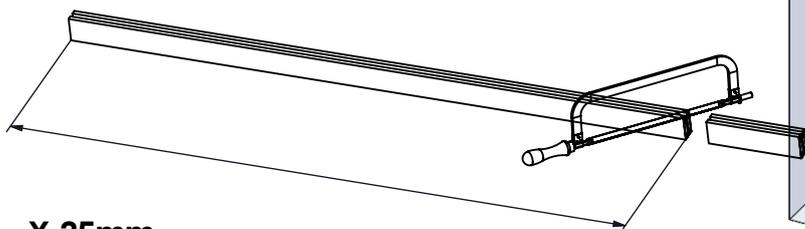


X-35mm

Please cut the fabric to the appropriate length based on the situation at the scene.

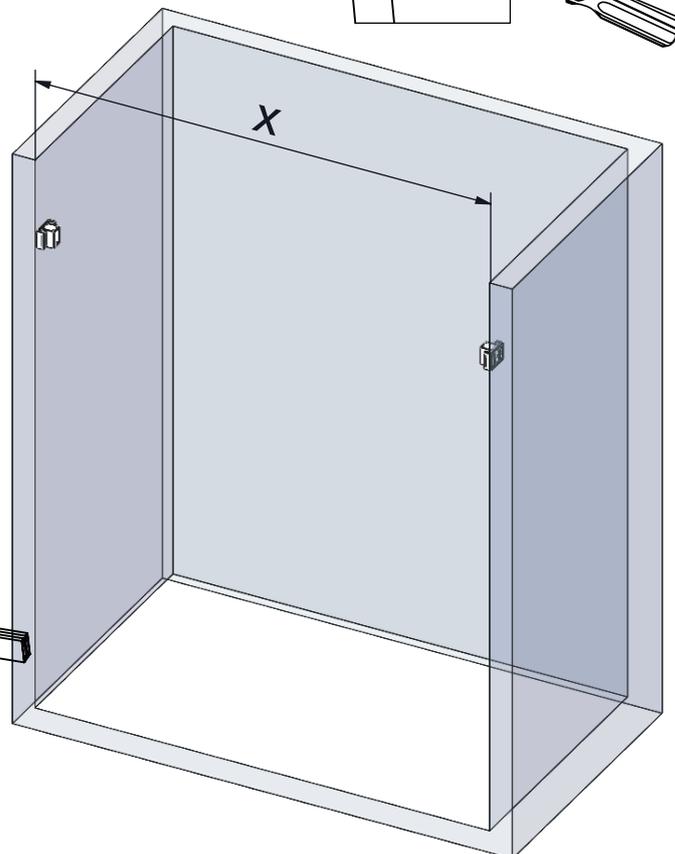

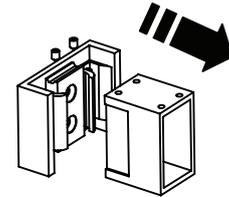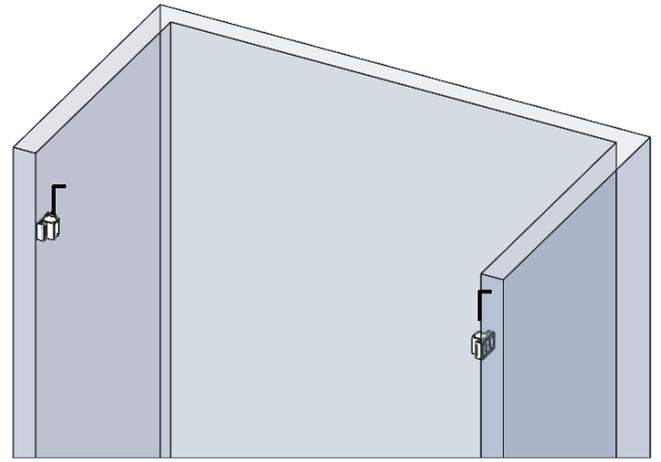
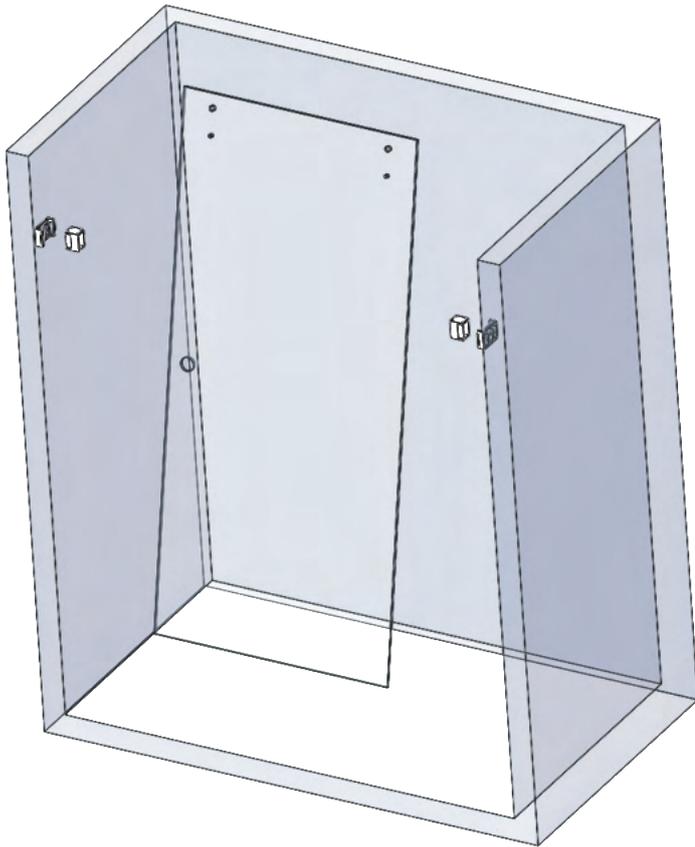


The screws are facing upwards.

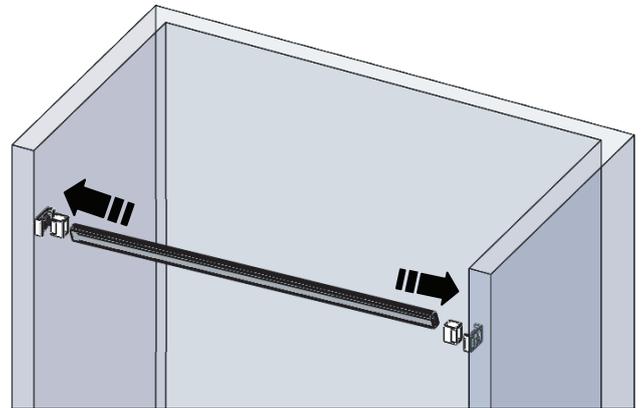


Precautions for installing the guide rails:



1. Select the appropriate length of the guide rail;
2. Attach accessory 1b to the guide rail;
3. Combine the guide rail with 1a;
4. Use the tool to tighten the screws at the top of 1B.

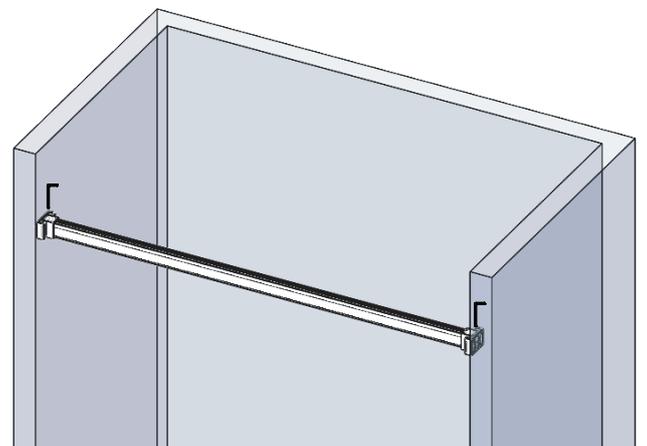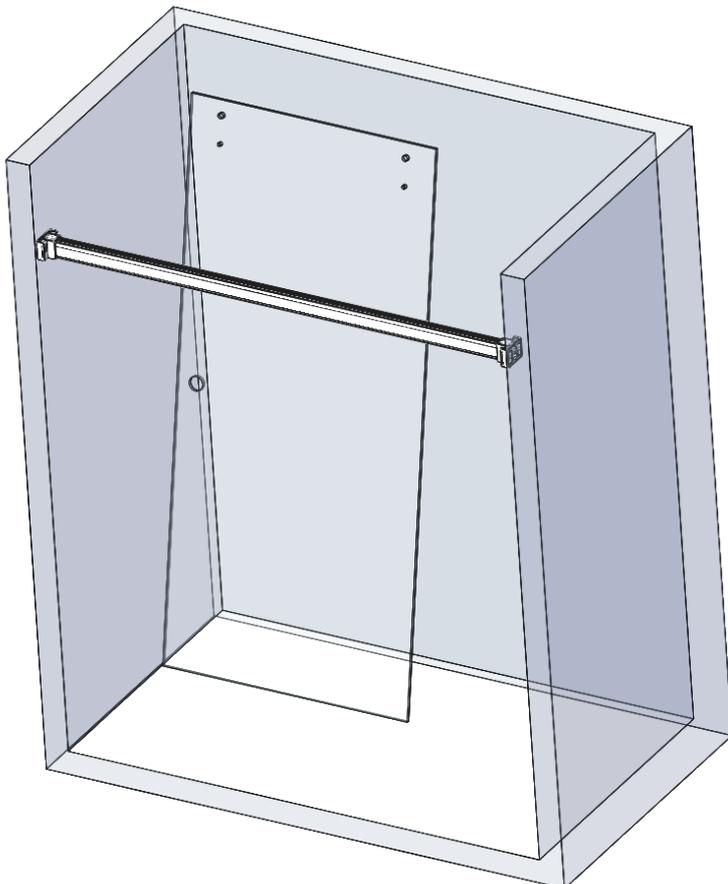


The installed effect is as shown in the picture.

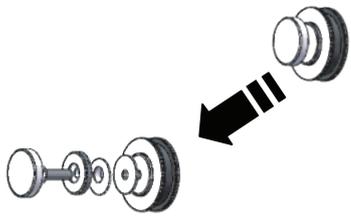


6. Remove accessory 4 and assemble it onto the glass according to the instructions in the picture.

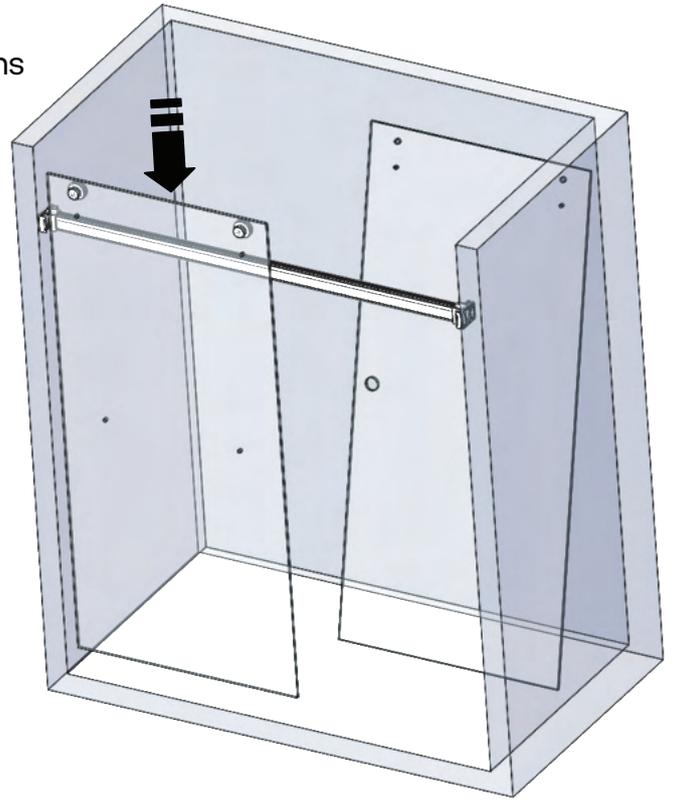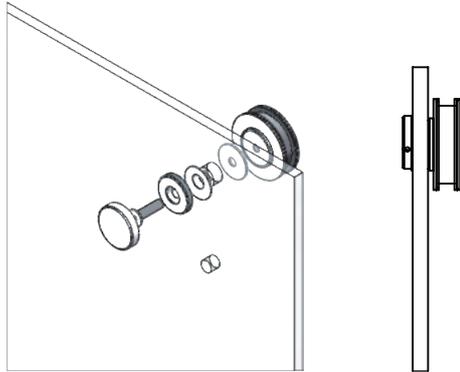


7. After installing accessory 4, attach the glass to the guide rail as shown in the figure.

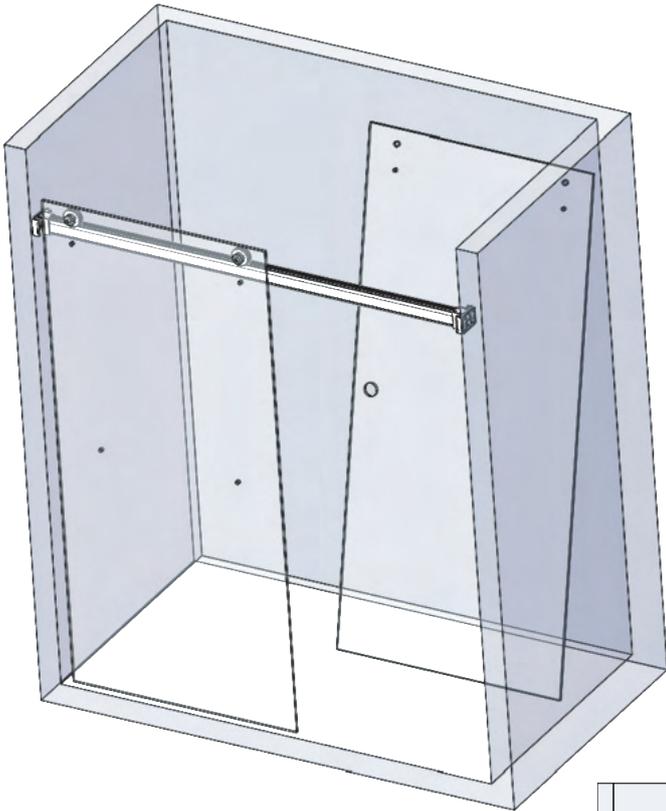


8. Use the tool to adjust the height of the roller. (The roller is designed with an eccentric wheel, and the height of the glass can be adjusted by rotating it.)

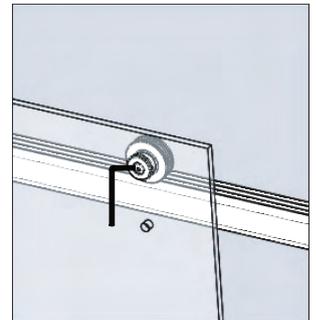


Error!

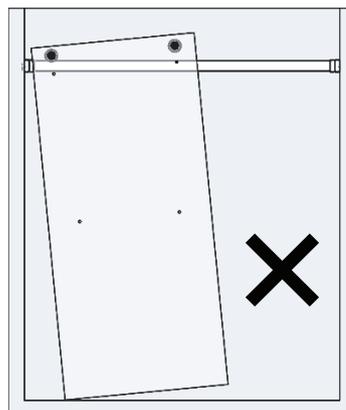


Correct

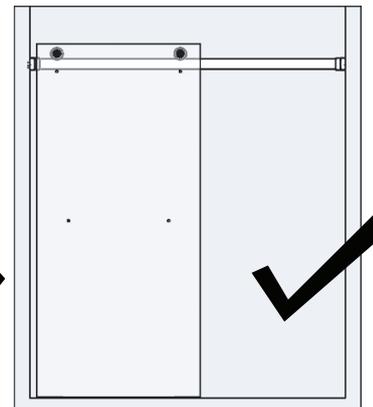

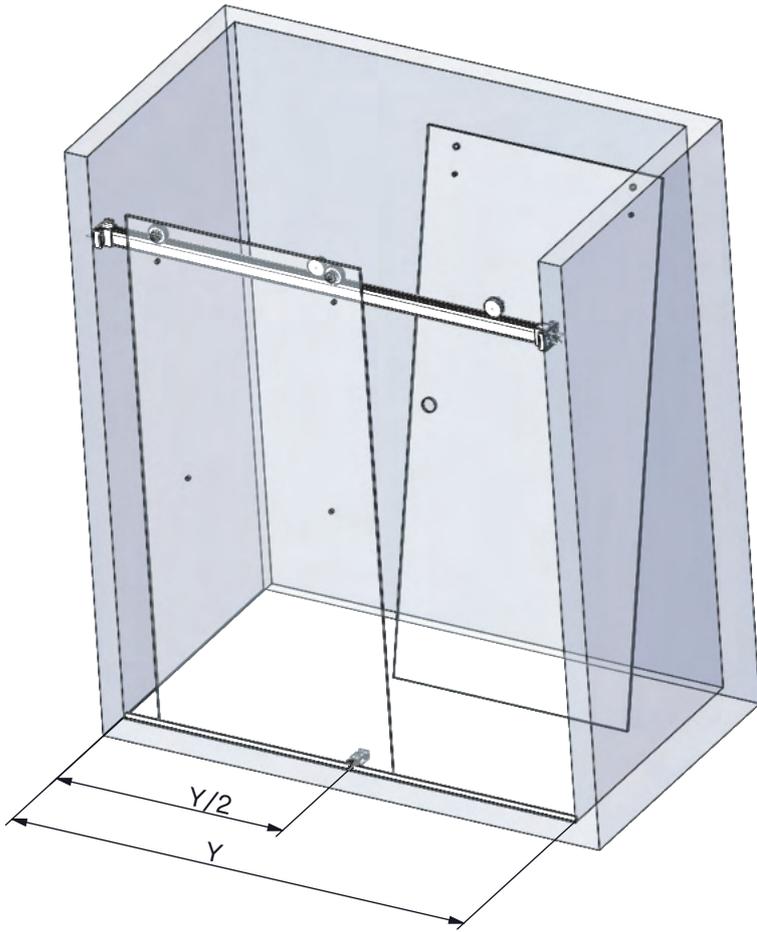


The installation position of the glass guide block.



Install Glass Guide.


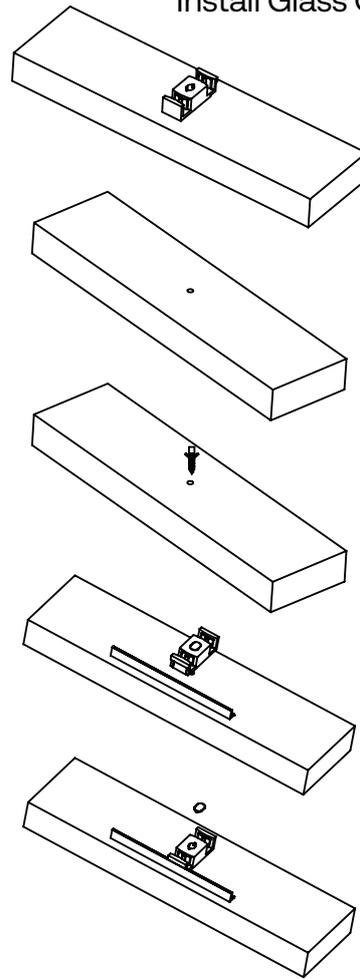


1. Mark the installation points
2. Insert expansion rubber screws
3. Inject waterproof sealant as needed
4. Install the glass guide blocks and the aluminum water-blocking edge





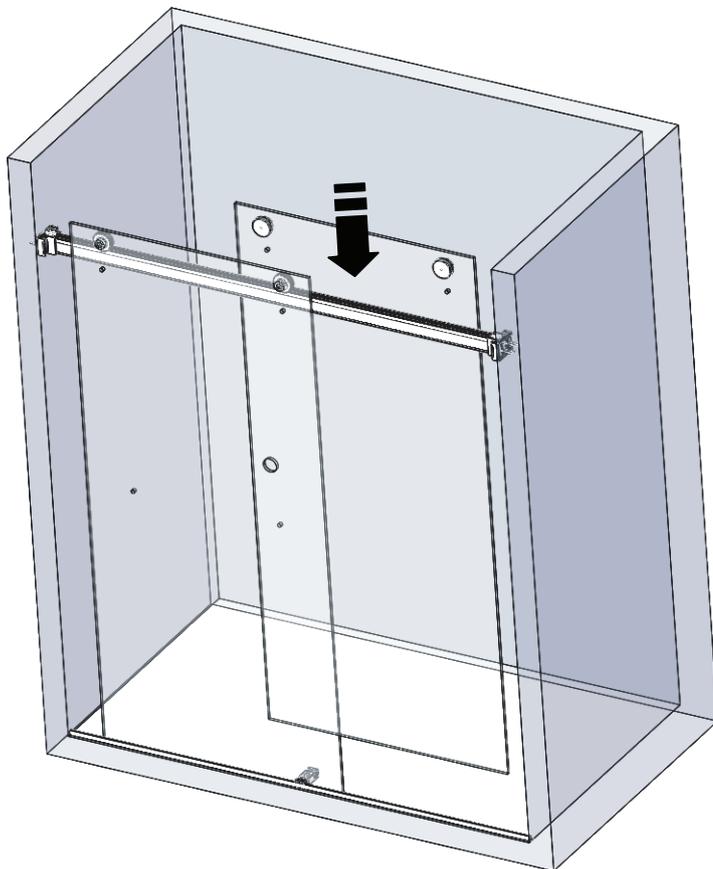


Install the second glass roller in the same way



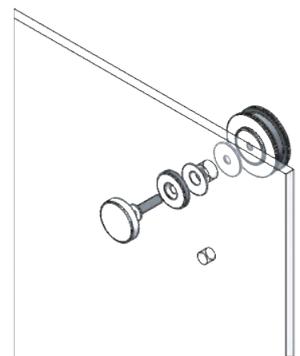
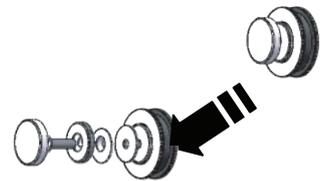


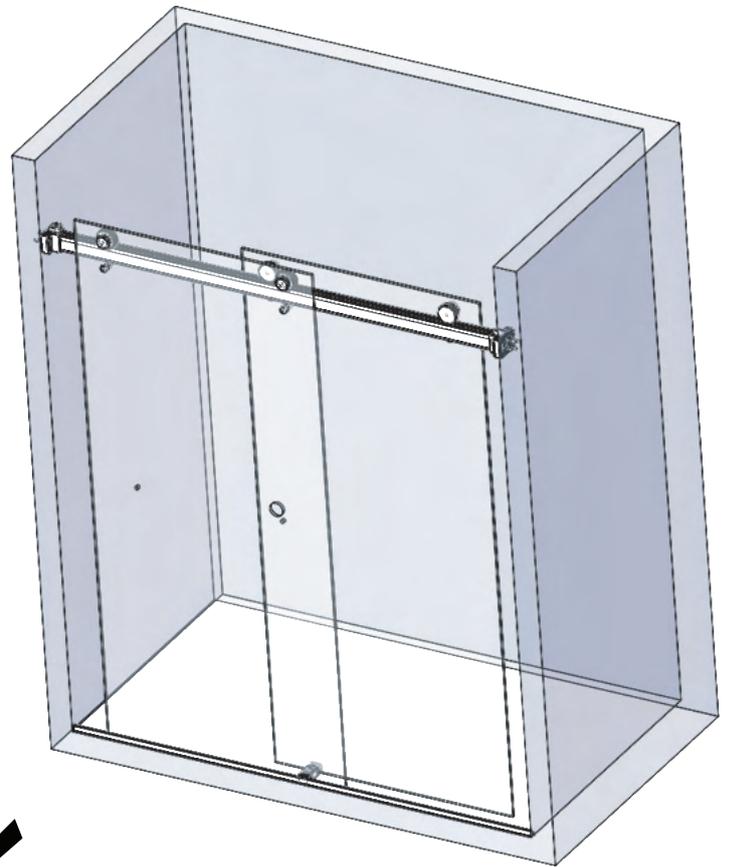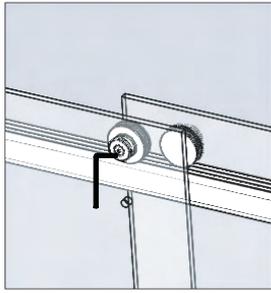


According to the illustration, install the second piece of glass and use the tools to adjust the roller to the appropriate height.

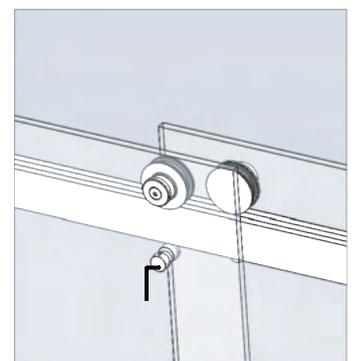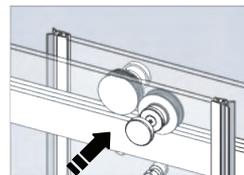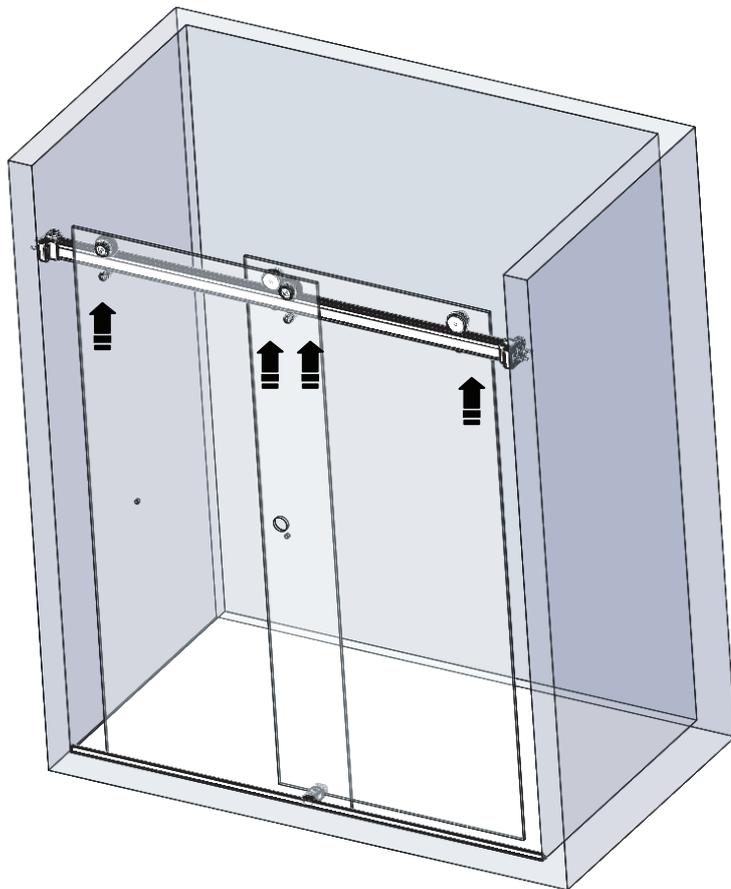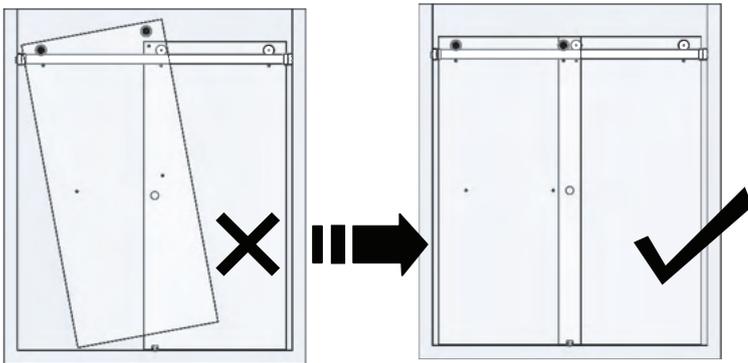


According to the illustration, install the accessory 5 (Anti-Lift Pins)

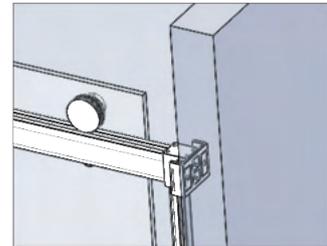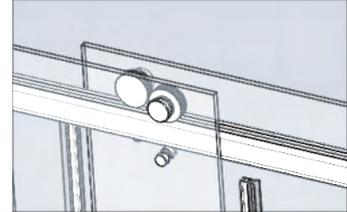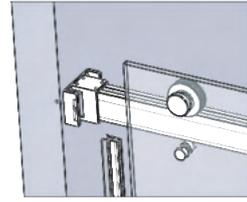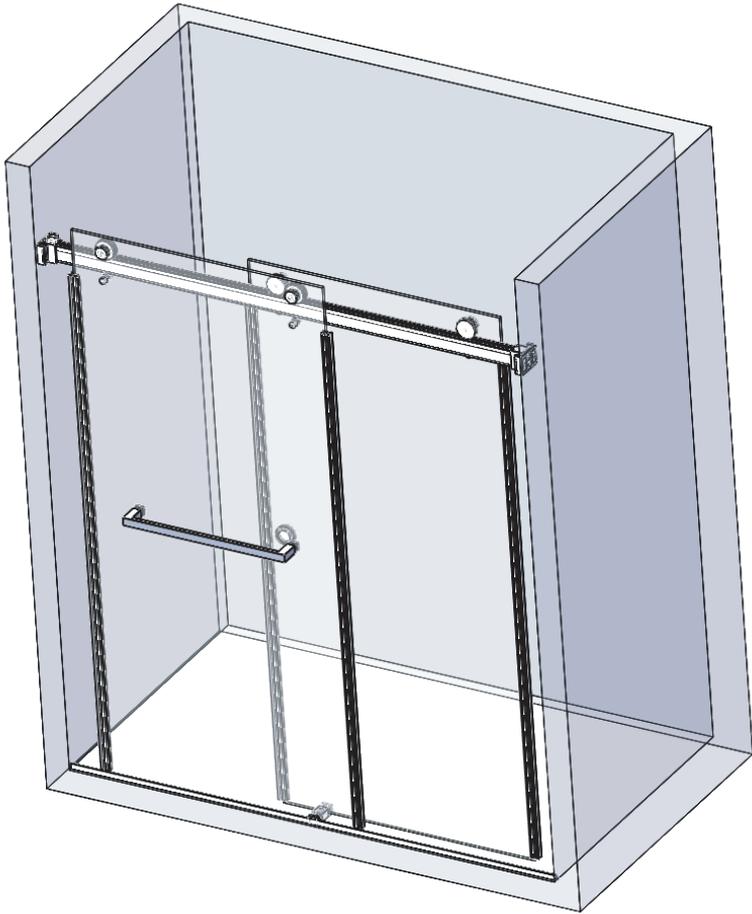

Install the bubble anti-collision strips


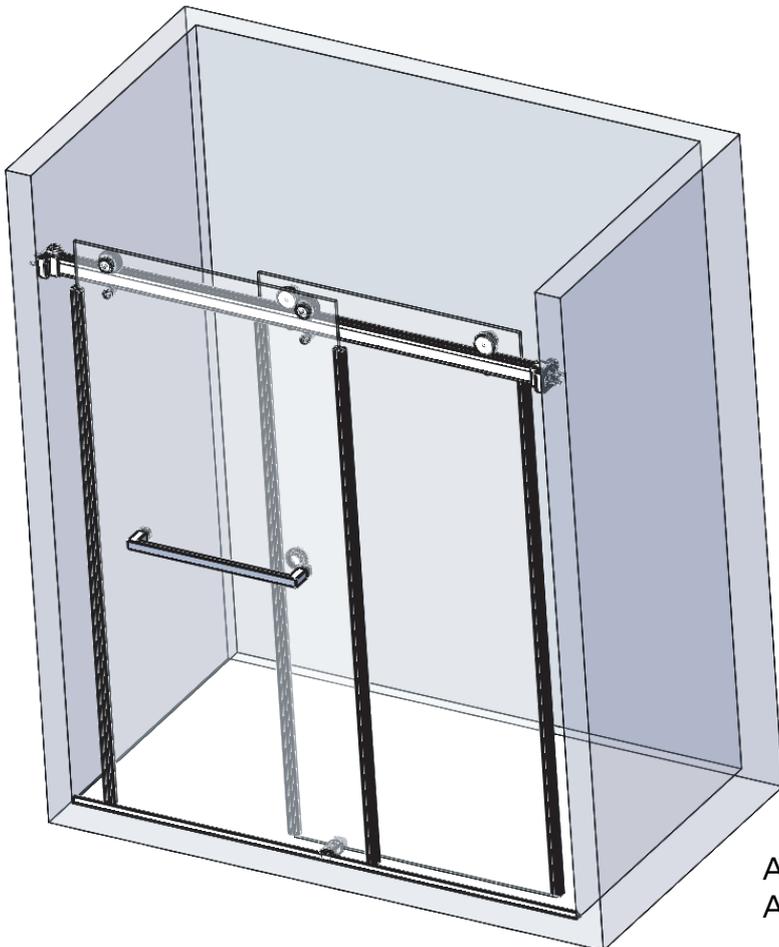


According to the picture, turn on the knob handle. And install it onto the glass.

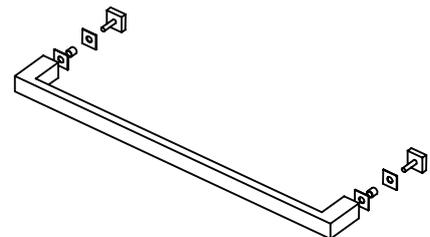

According to the picture, open the towel rack. And install it onto the glass.

Installation precautions for aluminum alloy water-blocking strips:

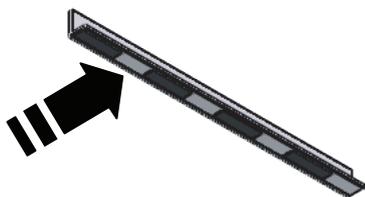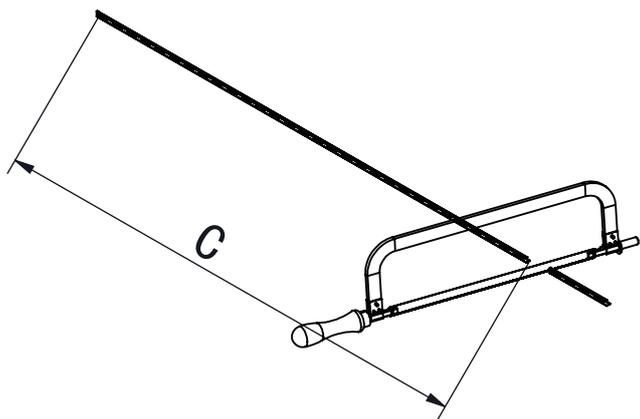

3M Double-sided adhesive tape

If necessary, double-sided adhesive can be added to the bottom of the water-blocking strip. Or, after installation, use transparent silicone adhesive for fixation.

Notes:

1. After installation, please keep it dry for 24 hours. Wait until the glue has set before using.
2. Steel-coated glass must be used.
3. All the screws in each part must be tightened.
4. After 24 hours of installation, it is necessary to inspect the sliding door system to see if there is any occurrence of glass falling. If so, the installation height of the rollers needs to be adjusted promptly.

