


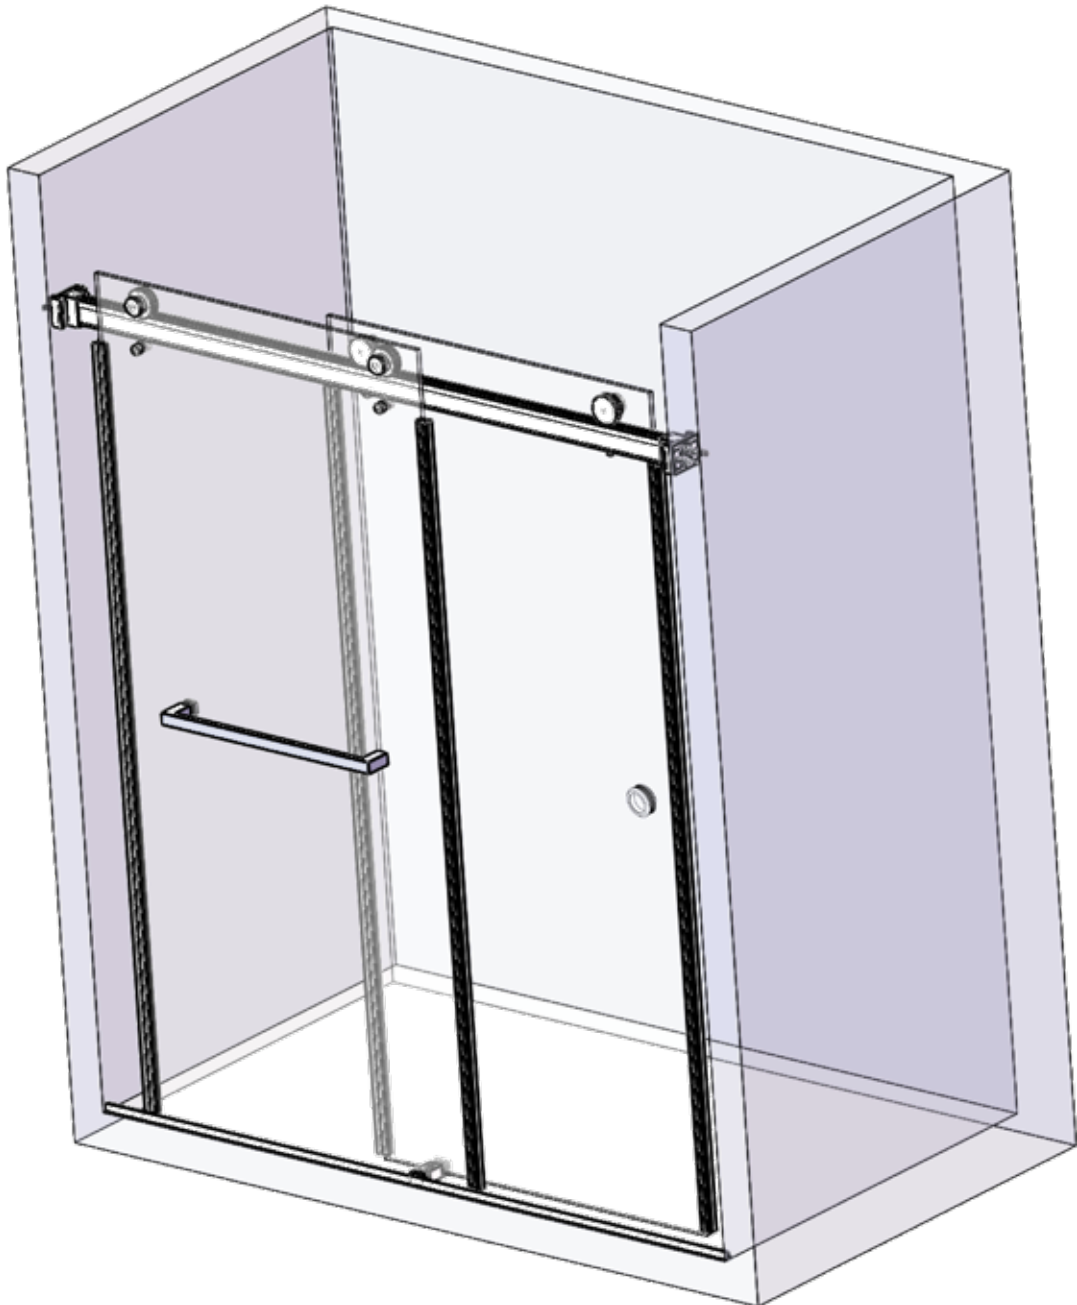


HS01 FRAMELESS DUAL SLIDING SHOWER DOOR

INSTALLATION INSTRUCTIONS




Number of Parts


Part	Description	Quantity	Part	Description	Quantity
1a	Fixed to the Wall with Guide Rails	2	7	Glass 2	1
1b	Guide Rail Connector	3	8	Knob	1
1c	Anti-Collision Rubber	4	9	Towel Bar	1
2	Fixed Screw	4	10	Bubble Seal Component	4
3	Guide Rail	1	11	Glass Guide	1
4	Roller	4	12	Aluminum Water Guard	1
5	Anti-Lift Pins	4	13	Fixed Screw	1
6	Glass 1	1	14		

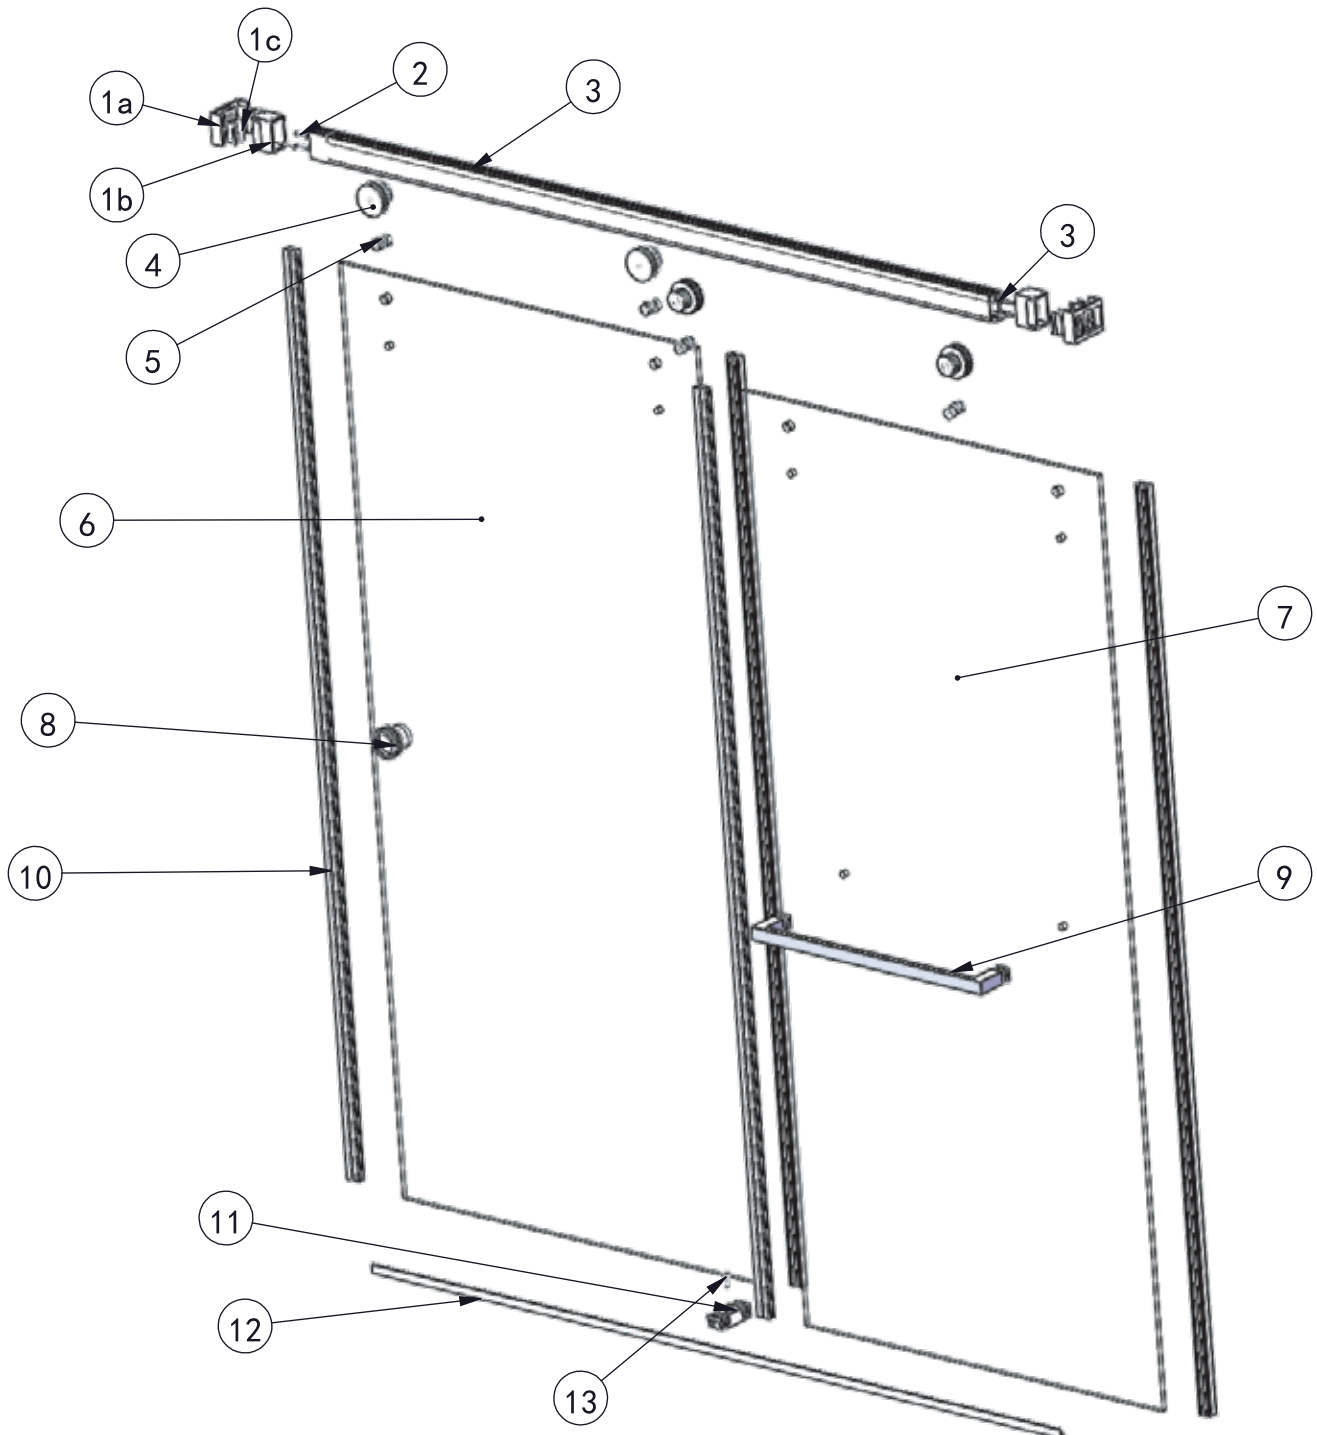


Parts List

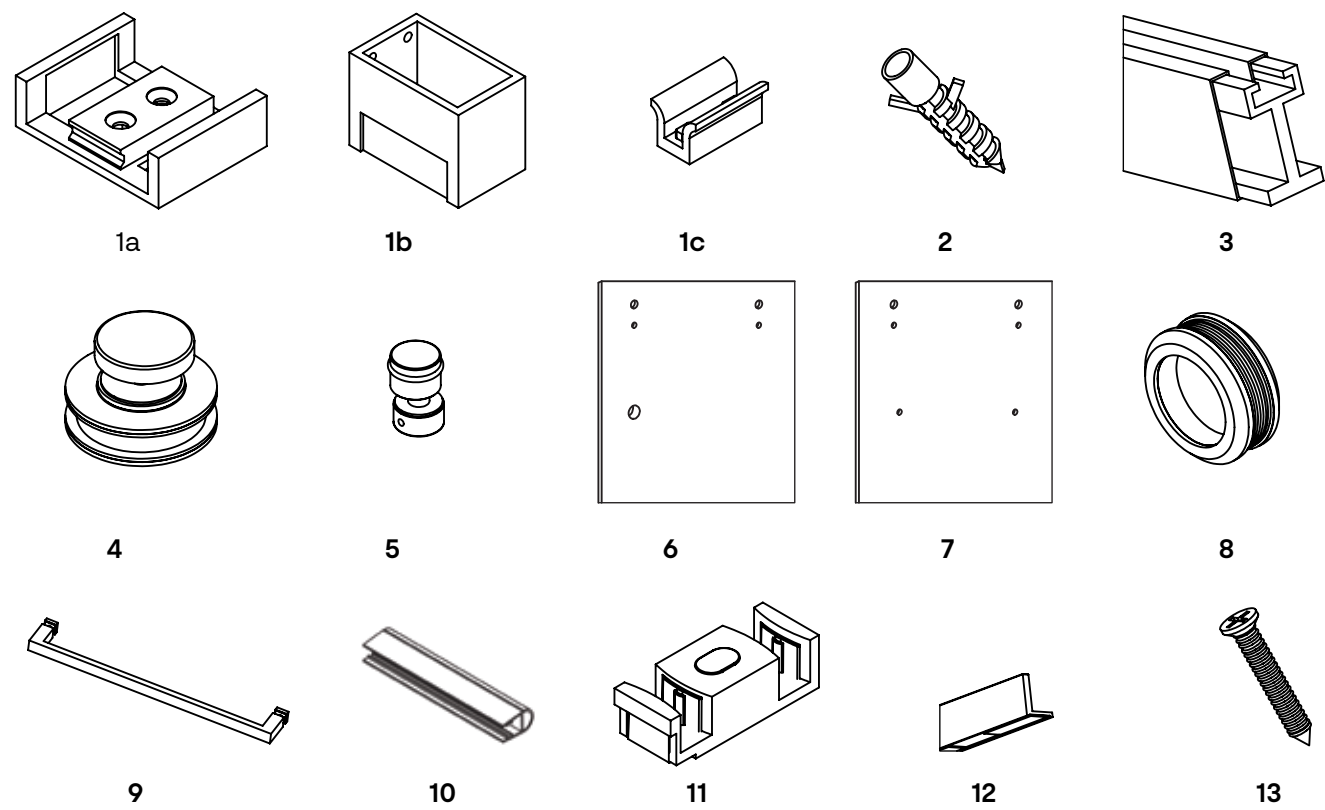


TOOLS REQUIRED

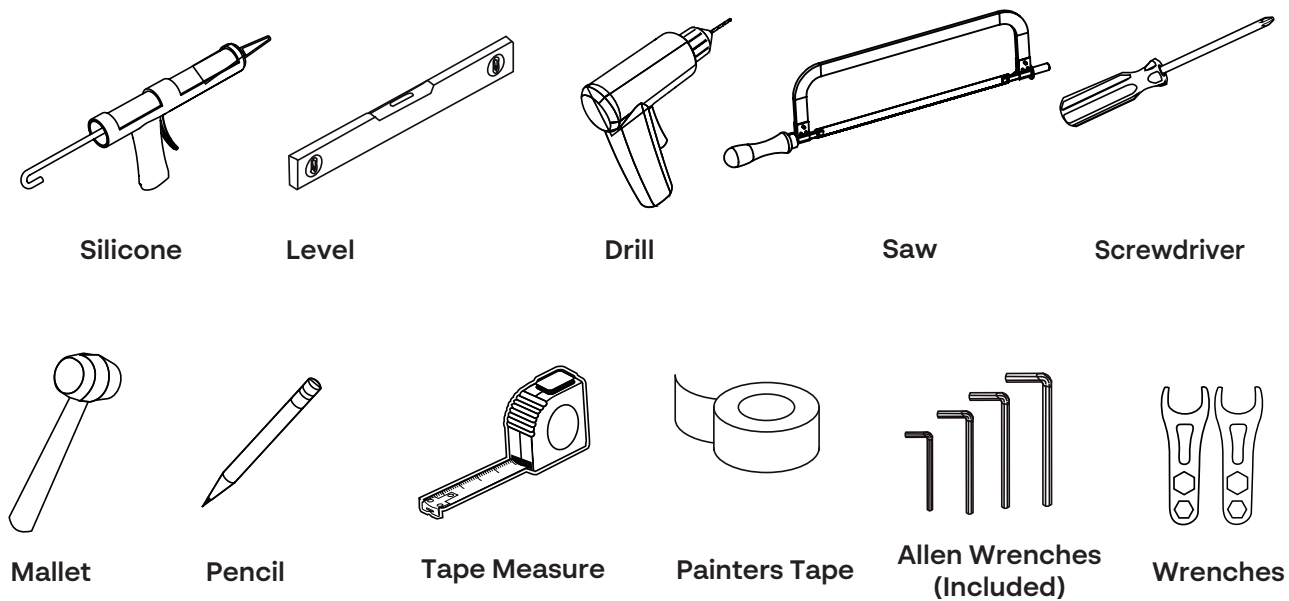


1. Installation of Proper Anchoring



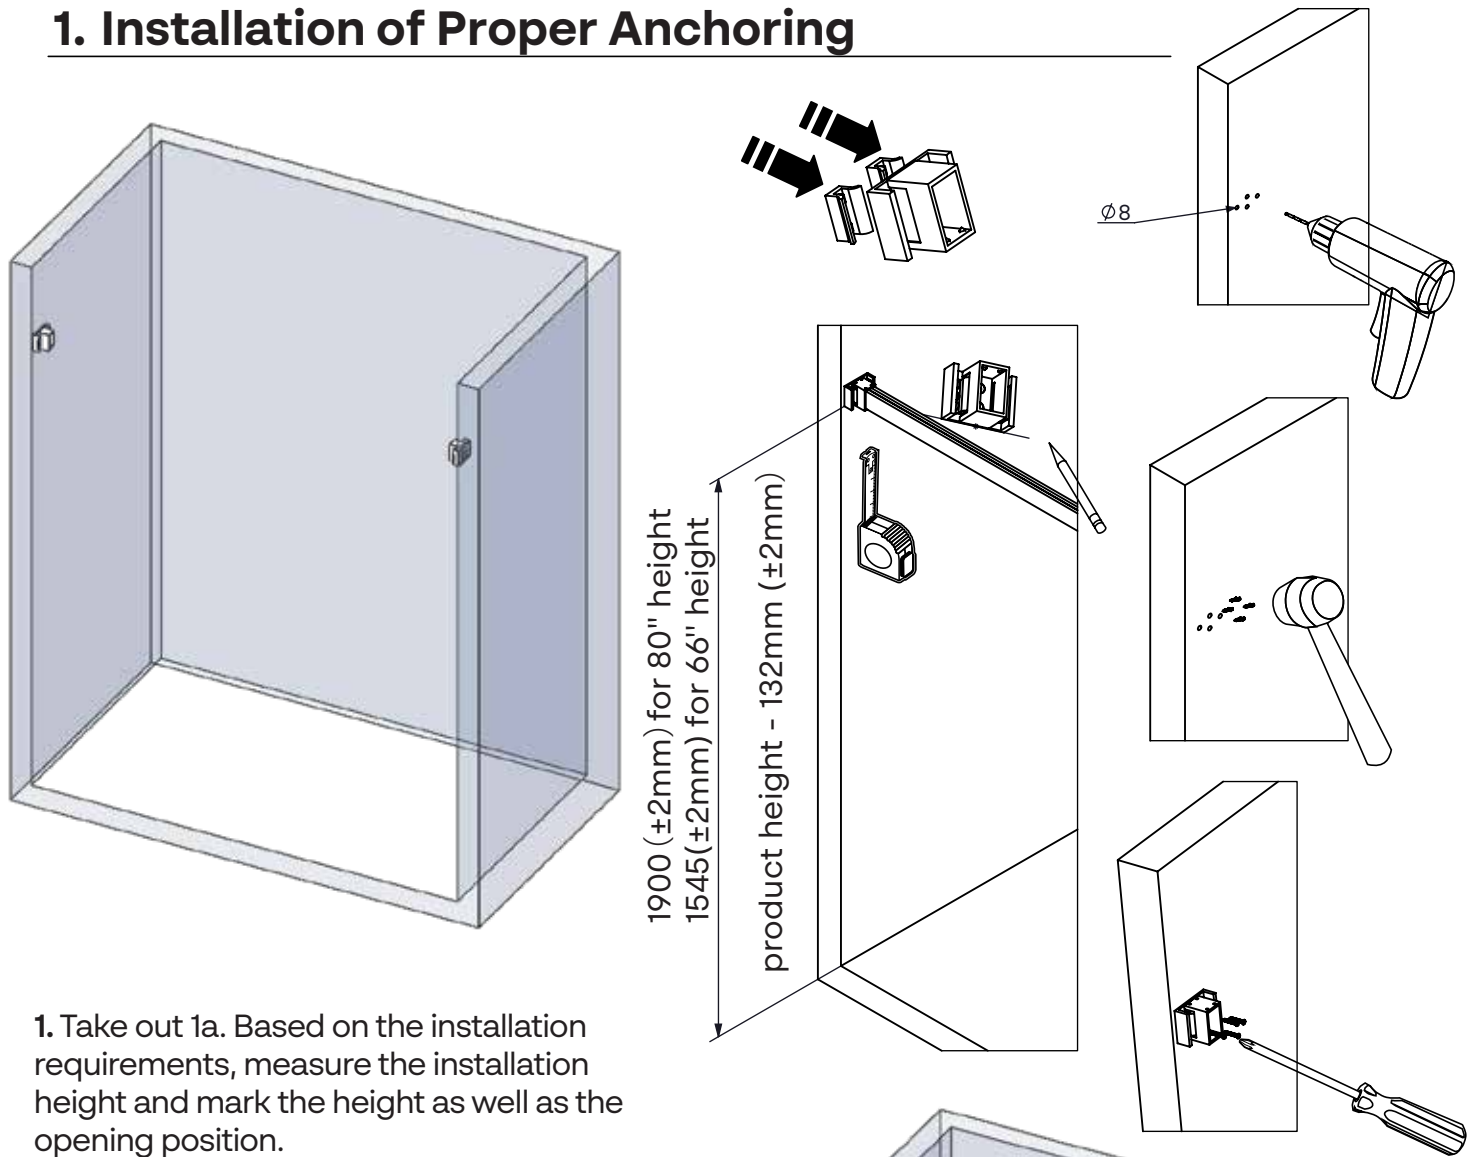


1. Take out 1a. Based on the installation requirements, measure the installation height and mark the height as well as the opening position.
2. Use an 8mm drill bit to make a hole in the wall, with the hole depth being 50mm.
3. Use a hammer to drive the expansion glue screw into the hole, and then inject waterproof glue.
4. Install 1a + 1c and tighten the screws.
5. According to the width of the door frame, cut the guide rail, install 1b on the guide rail, and then attach it to 1a + 1c.

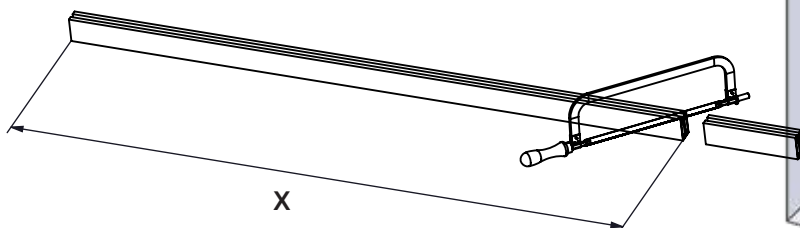


Please cut the rail to the appropriate length based on on-site conditions

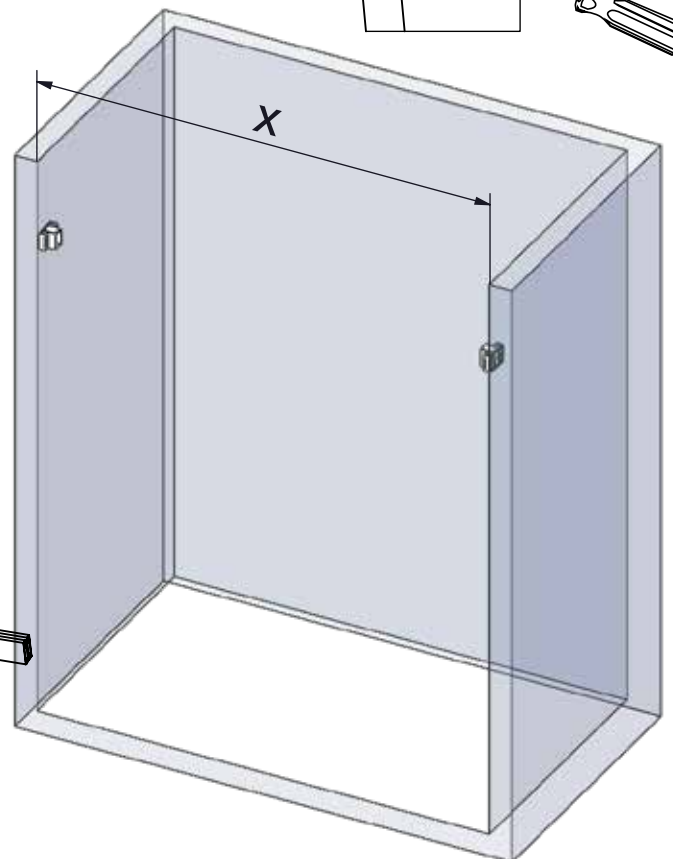

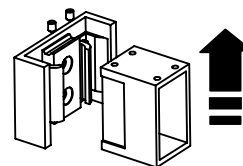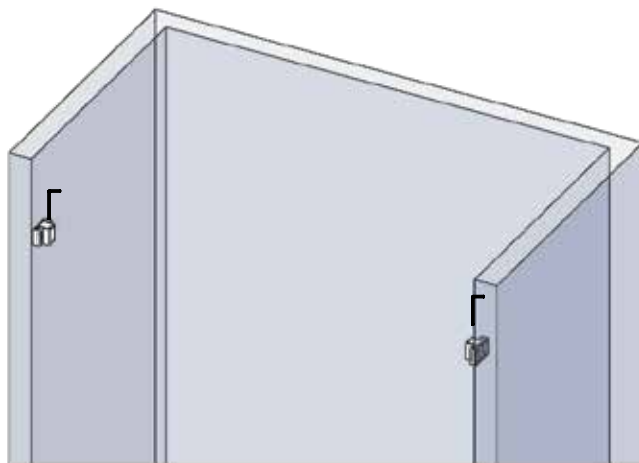
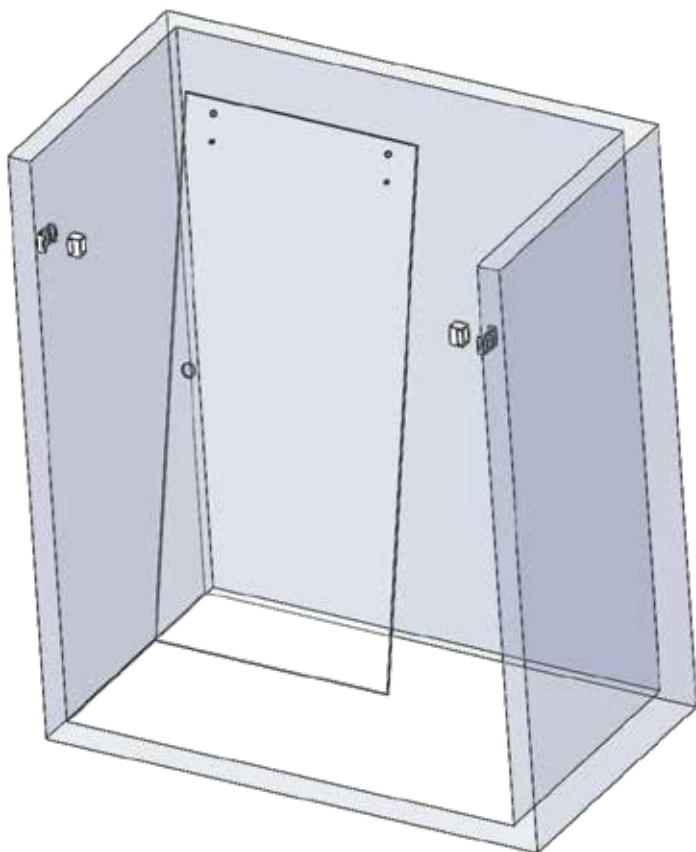


The screws are facing upwards.

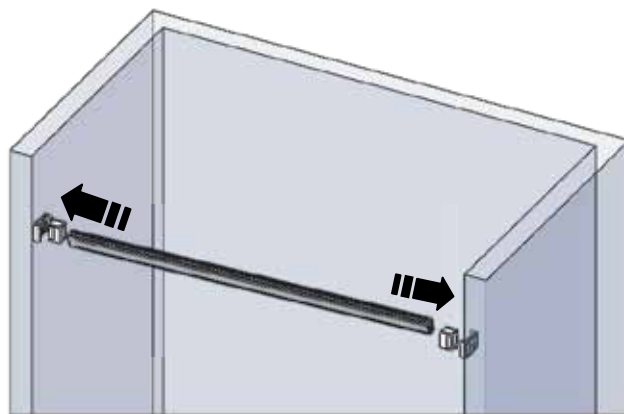


Precautions for installing the guide rails:

1. Select the appropriate length of the guide rail.
2. Attach accessory 1b to the guide rail.
3. Combine the guide rail with 1a.
4. Use the tool to tighten the screws at the top of 1B.

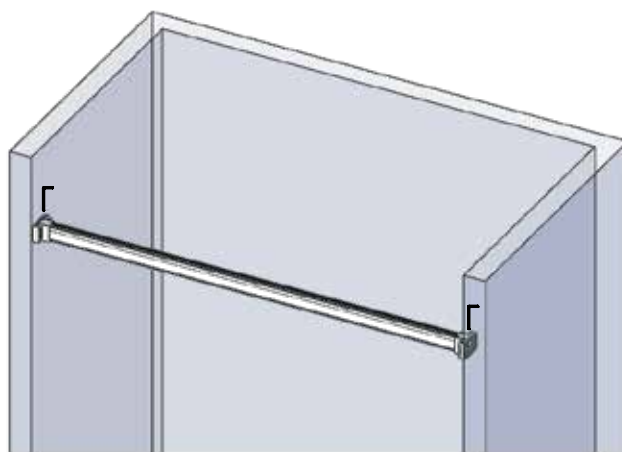
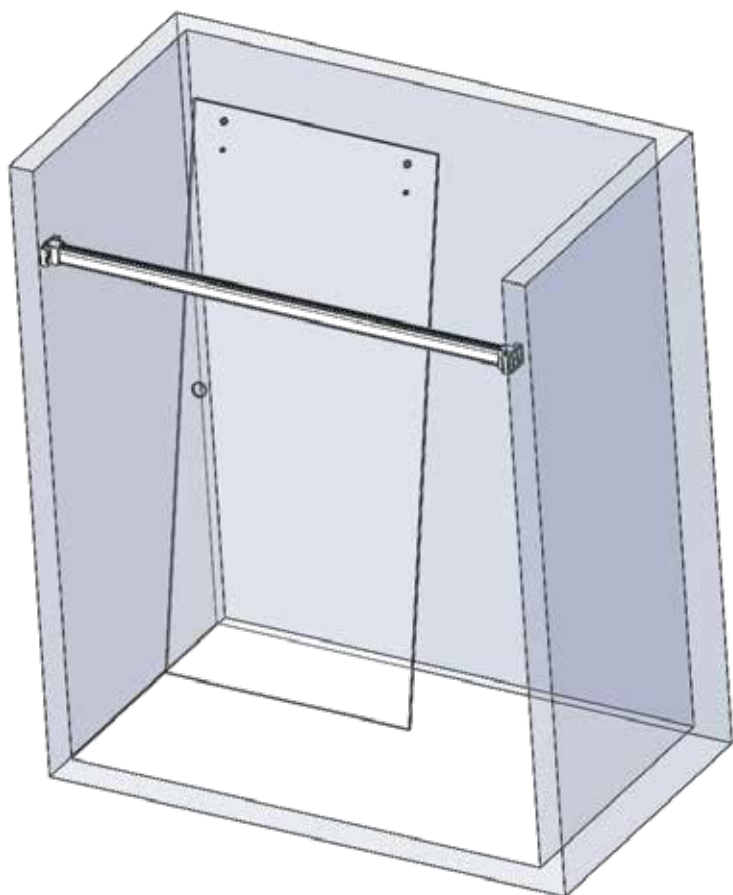


The finished assembly should appear as shown in the diagram.


2. Installation of Roller Bearings & Sliding Glass Panels

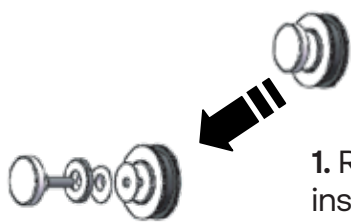


1. Remove accessory 4 and install it onto the glass according to the instructions in the picture.

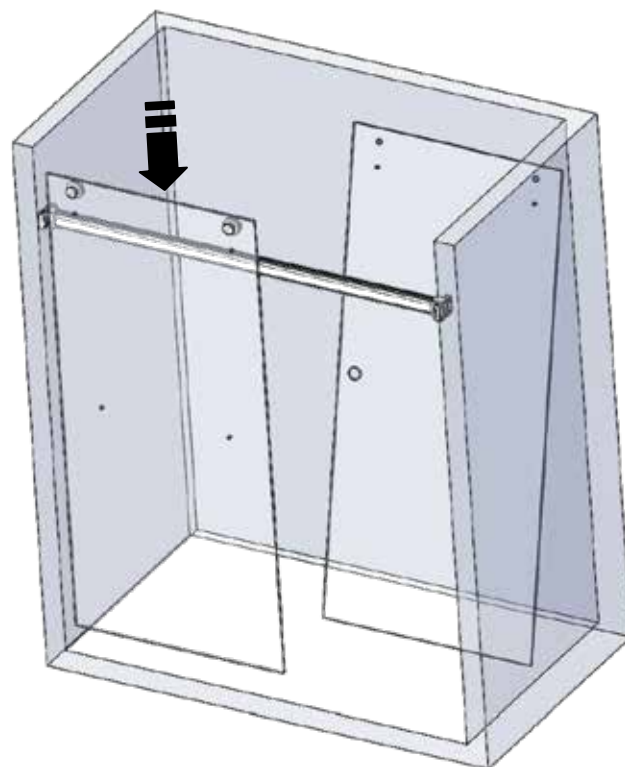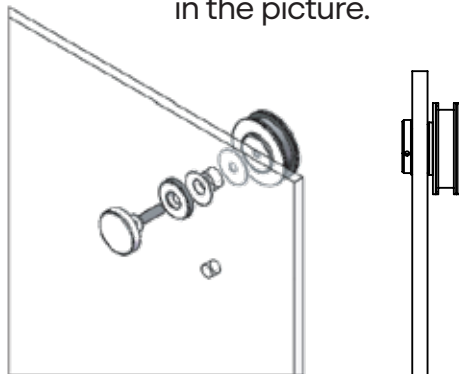


2. After installing accessory 4, attach the glass to the guide rail as shown in the figure.

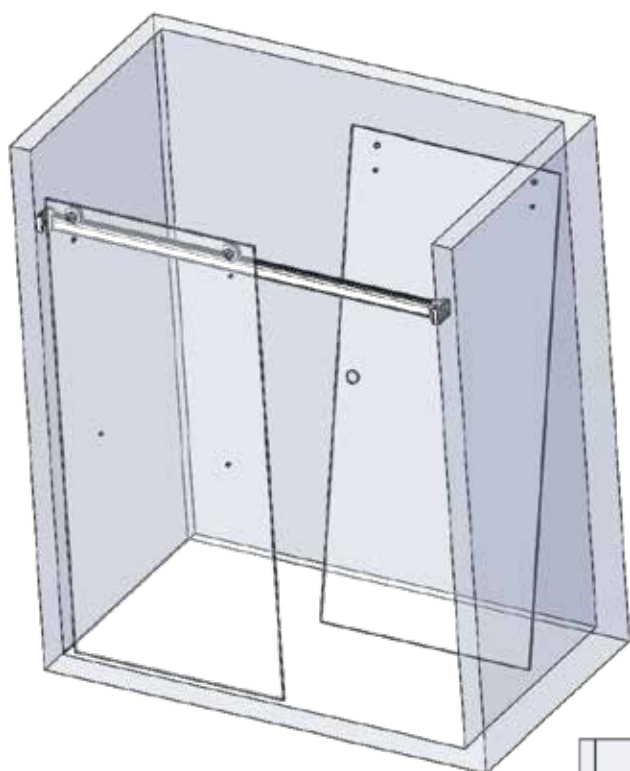


3. Use the tool to adjust the height of the roller. (The roller features an eccentric wheel; rotate it to adjust the height of the glass panel.)

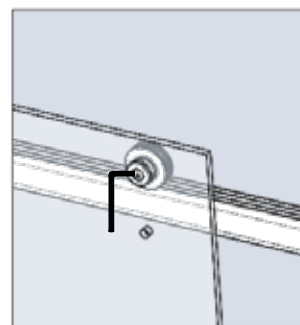


Error!

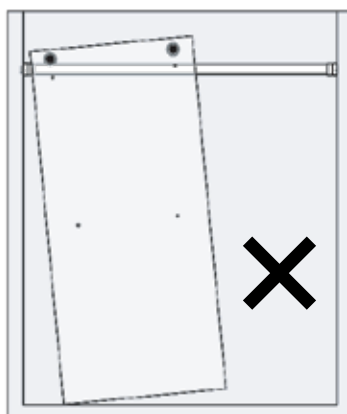

Correct

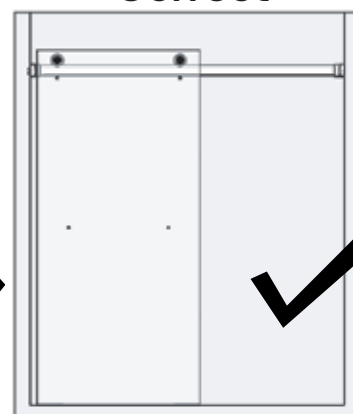


3. Installation of Anti-swing Accessories

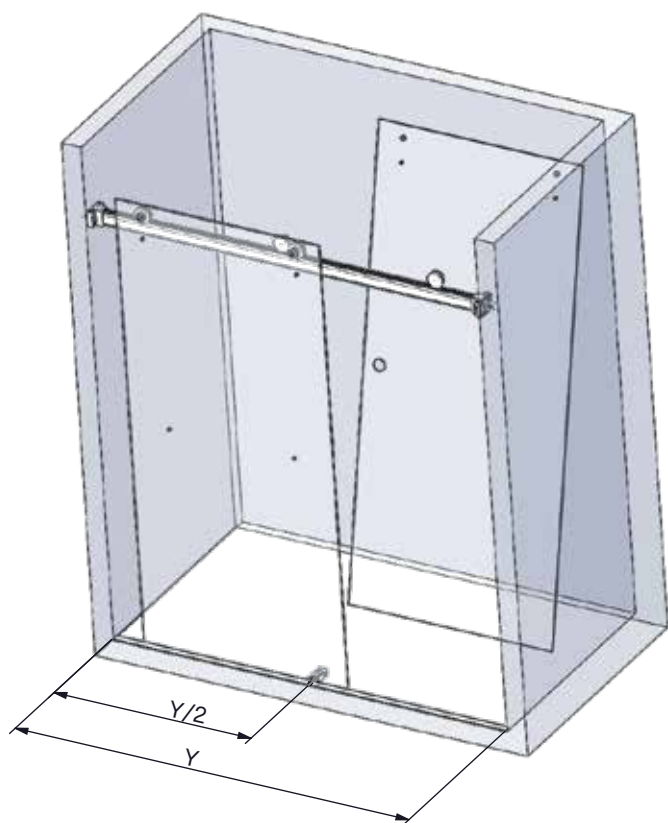


The installation position of the glass guide block.



Install Glass Guide.

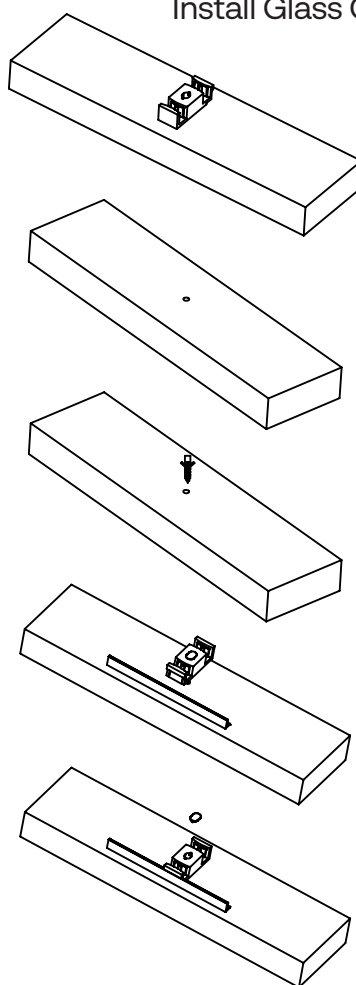


1. Mark the installation points.
2. Insert expansion rubber screws.
3. Inject waterproof sealant as needed.
4. Install the glass guide blocks and the aluminum water-blocking edge.



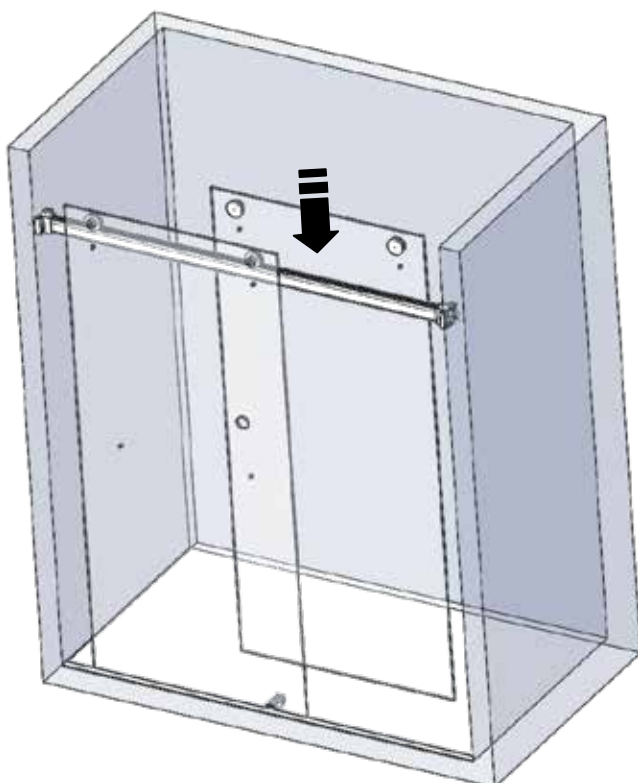


Install the second glass roller in the same way.


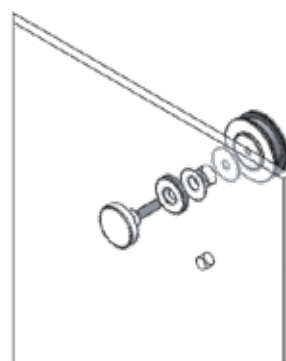
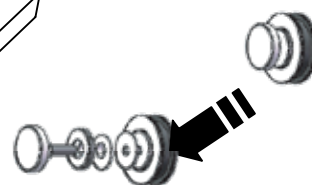


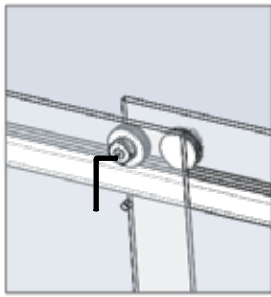





Following the illustration, install the second glass panel and use the provided tools to adjust the roller height.

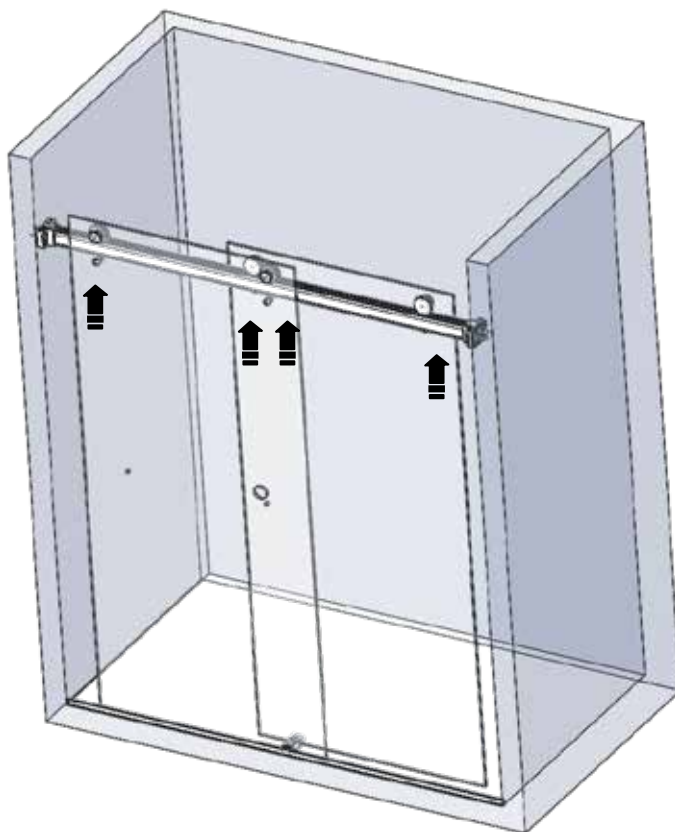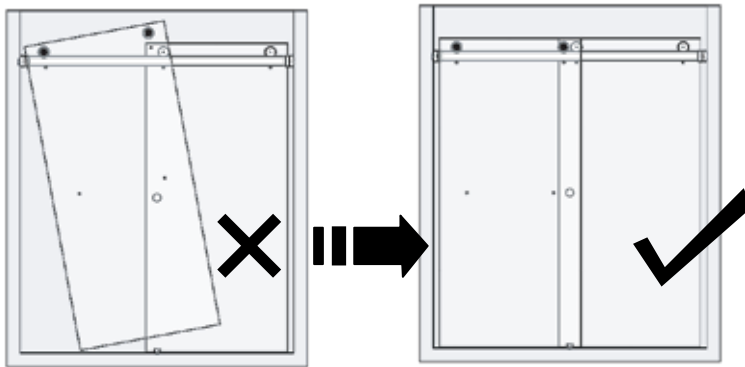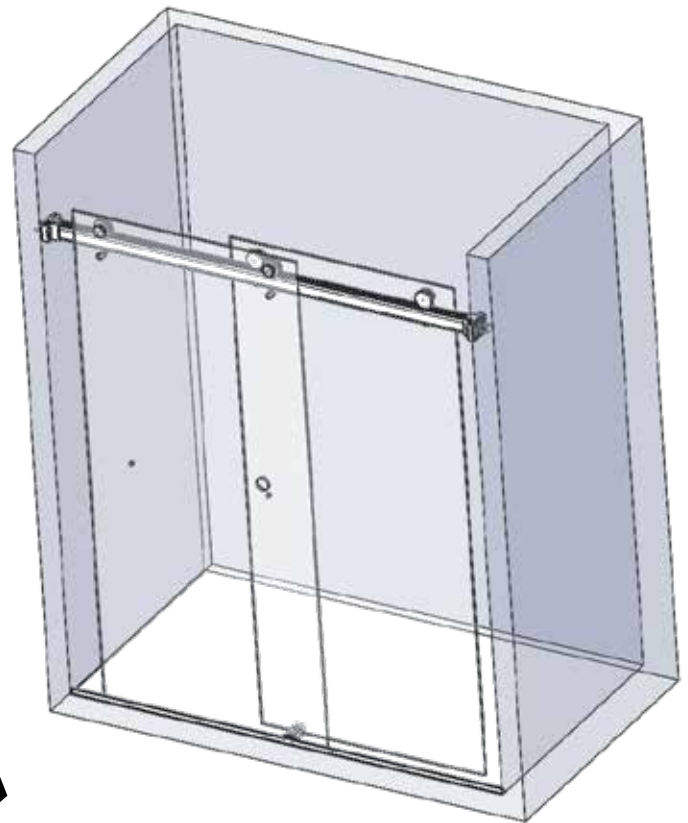



According to the illustration, install the accessory 5 (Anti-Lift Pins).

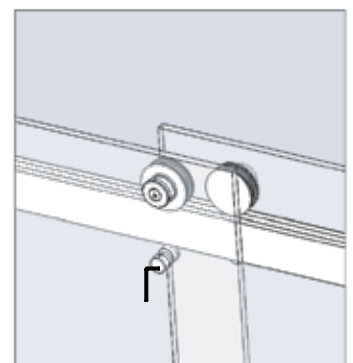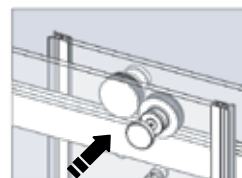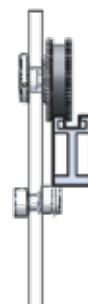


Use the tool to adjust the height of the anti-lift pins.

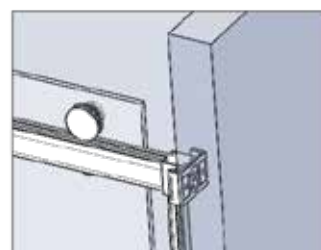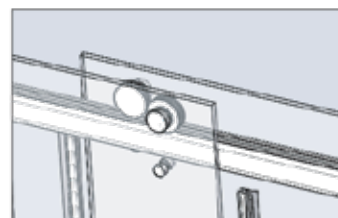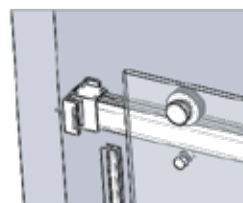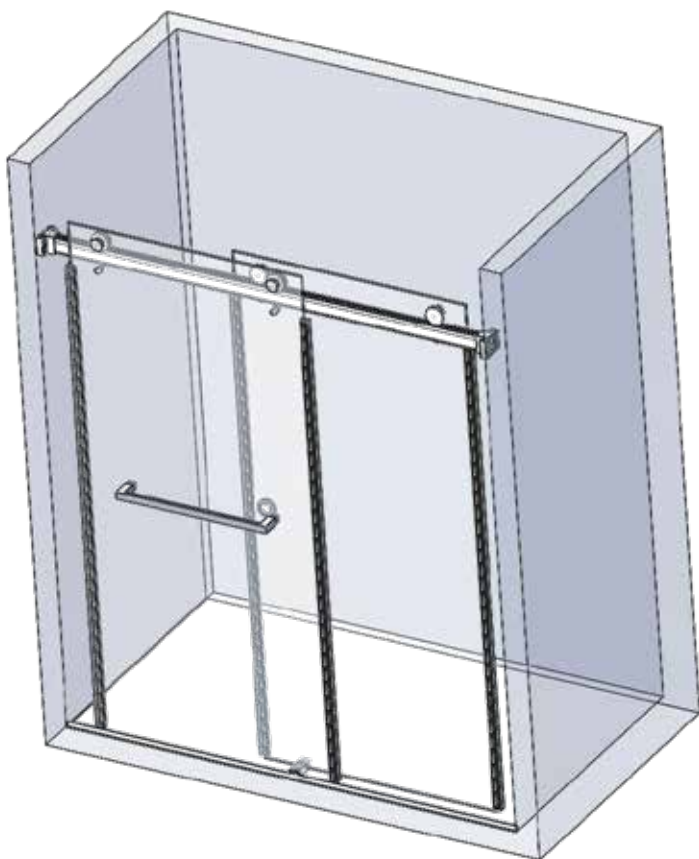

Install the bubble anti-collision strips.

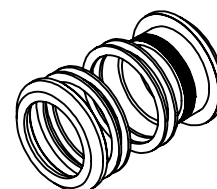
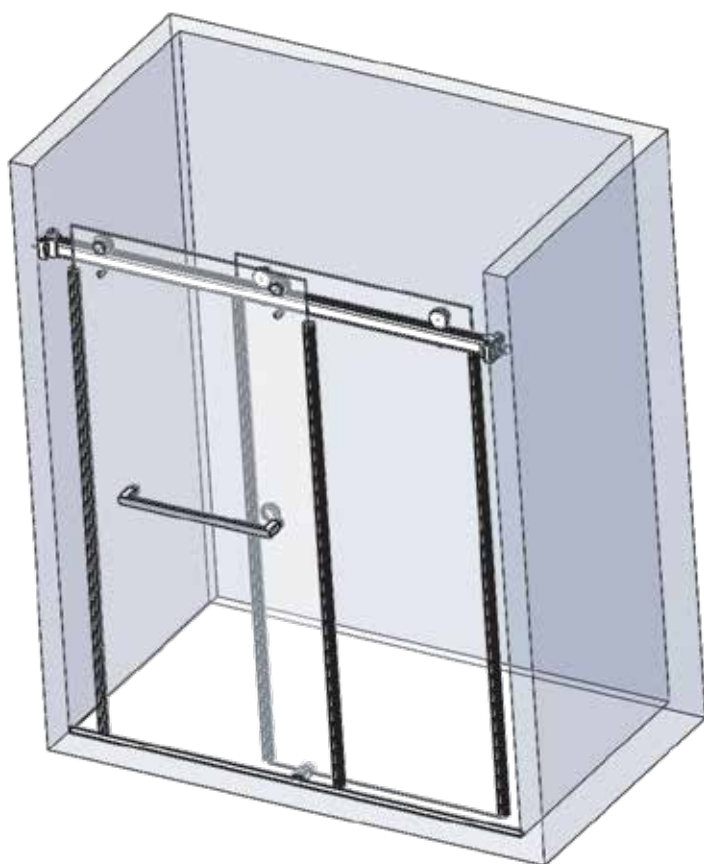


According to the picture, Unscrew the knob handle and mount it to the glass as shown.

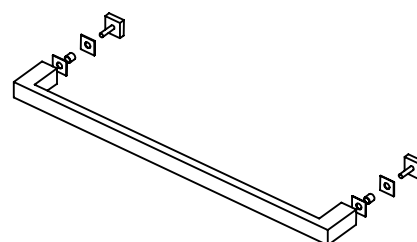

Disassemble the towel bar components and install them onto the glass."

Installation precautions for aluminum alloy water-blocking strips:

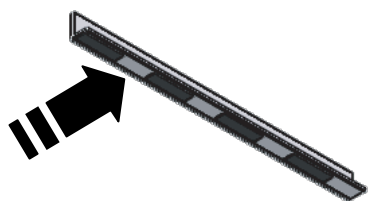
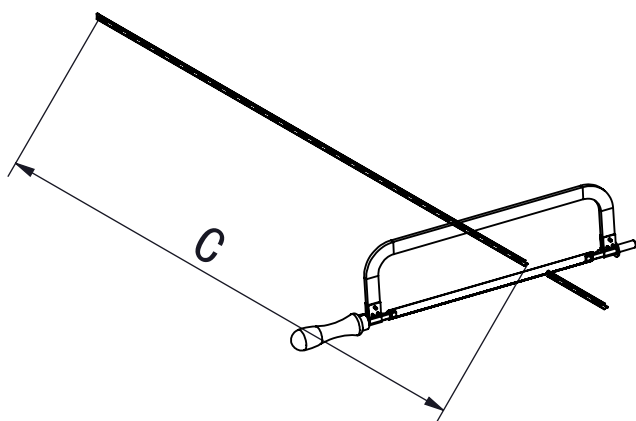



3M Double-sided adhesive tape

If necessary, double-sided adhesive can be added to the bottom of the water-blocking strip. Or, after installation, use transparent silicone adhesive for proper fastening.

Notes:

1. After installation, please keep it dry for 24 hours. Wait until the glue has set before using.
2. Steel-coated glass must be used.
3. All the screws in each part must be tightened.
4. After 24 hours of installation, it is necessary to inspect the sliding door system to see if there is any occurrence of glass falling. If so, the installation height of the rollers needs to be adjusted promptly.

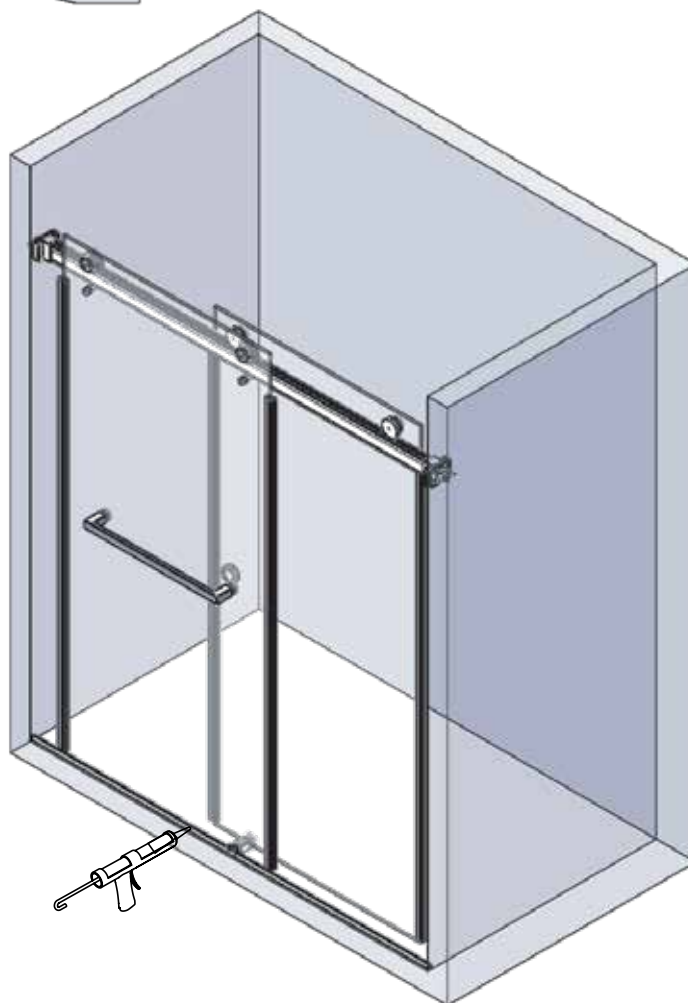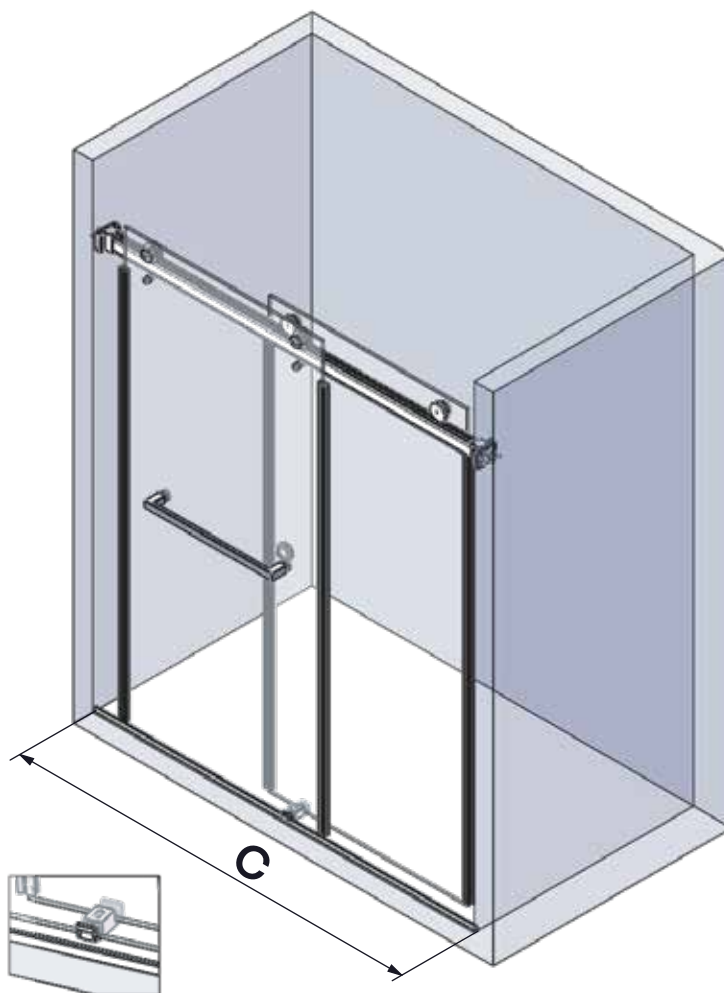

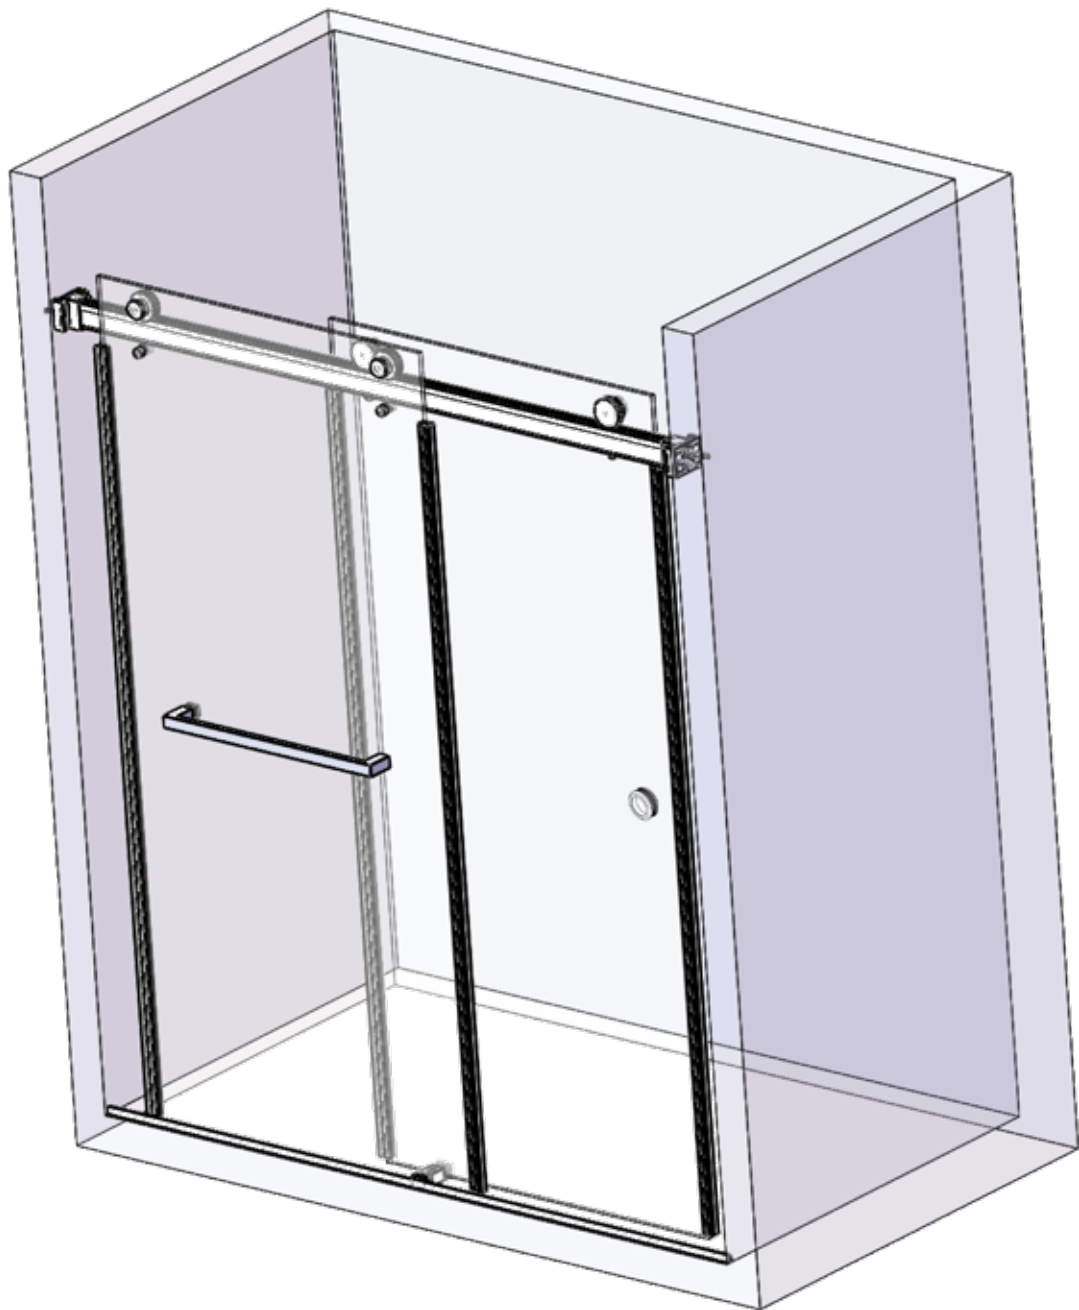

Notes:

1. After installation, keep dry for 24 hours. Do not use until the adhesive is fully cured.
2. Laminated glass must be used.
3. All the screws in each part must be tightened.
4. 24 hours after installation, inspect the sliding door system for glass loosening or falling.
Adjust roller height immediately if any problem occurs.